

| PROJECT | CUSTOMER | VEHICLE |
|-----------------|----------|----------------|
| Xtrapolis-PRASA | PRASA | 252 – M1 – VFT |

RTR Vehicle Functional Static Testing TS252 M1 Report
 GIB0000007327



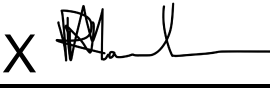


| | CREATED | VERIFIED | APPROVED | DISTRIBUTION |
|------------------|-----------------|----------------|-----------------|---|
| Name | Neliswa MABUNDA | Sifiso LUKHELE | Kgomotso NKOANA | Confidentiality Category <i>Restricted</i> <i>Project</i> <i>Normal</i> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> |
| Date | 23/10/2024 | 23/10/2024 | 23/10/2024 | Control Category <i>Controlled</i> <i>Not Controlled</i> <input checked="" type="checkbox"/> <input type="checkbox"/> |
| Signature | | | | Language EN |

This report has been automatically generated from TES version 1

Table of modifications

| Rev | Date | Modifications Content | Writer |
|-----|------------|-----------------------|-----------------|
| A0 | 23/10/2024 | Creation | Neliswa MABUNDA |

Internal validations

| | Name | Function | Date | Signature |
|-----------------|-----------------|---------------------|------------|---|
| Creator | Neliswa MABUNDA | EPU Manager | 23/10/2024 | X  Neliswa MABUNDA EPU Manager |
| Verifier | Sifiso LUKHELE | Serial Test Manager | 23/10/2024 | X  Sifiso LUKHELE Serial Test Manager |
| Approver | Kgomotso NKOANA | Test Expert | 23/10/2024 | X  Kgomotso NKOANA Test Expert |

Execution Plan

| | |
|-------------------|------------|
| Start Date | 15/10/2024 |
| End Date | 16/10/2024 |

Contents

Section 1 - Purpose / Objectives

Section 2 - Energy Distribution

2.1 Instructions list

Section 3 - TCMS Network

3.1 Instructions list

Section 4 - Cabin Control

4.1 Instructions list

Section 5 - Internal Lighting

5.1 Instructions list

Section 6 - Train-Ground Communication

6.1 Instructions list

Section 7 - Pantograph

7.1 Instructions list

Section 8 - Rescue Mode and Emergency Disconnection

8.1 Instructions list

Section 9 - Emergency Brake

9.1 Instructions list

Section 10 - Service Brake

10.1 Instructions list

Section 11 - Holding and Parking Brake

11.1 Instructions list

Section 12 - Passenger Doors

12.1 Instructions list

Section 13 - HVAC Air Conditioning

13.1 Instructions list

Section 14 - Fire protection

14.1 Instructions list

Section 15 - Traction and Electric Brake

15.1 Instructions list

Section 16 - Vehicle Normalization

16.1 Instructions list

Section 17 - PACIS Network

17.1 Instructions list

Section 18 - Report summaries

18.1 Results status

18.2 Tools used



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 1 – Purpose / Objectives

1. Energy Distribution

Ensure the distribution of 110Vdc and 400Vac through the vehicle from the battery and Auxiliary converter

2. TCMS Network

Verify the working of the TCMS network and its core elements, i.e TRS, CRS.

3. Cabin Control

Verify the cabin control functions in both normal and backup modes, their commanding of the train lines, and the TCMS response to each function.

4. Internal Lighting

Verify the working of all internal lighting functions.

5. PACIS System

Verify power supply to all PACIS network equipment.

6. Train-Ground Communication

Setup the Train-to-ground systems, and verify correct installation of the antennas by VSWR test.

7. Pantograph

The objective of this procedure is to ensure the correct control and operation of the pantograph.

8. Rescue Mode and Emergency Disconnection

The objective of this procedure is to verify the correct operation of the emergency disconnection function, as well as the correct activation of the Back-Up mode.

10. Emergency Brake

The objective of this procedure is to verify all electrical components of the Emergency braking system.

11. Service Brake

The objective of this procedure is to verify all electrical components of the Service brake system.

12. Holding and Parking Brake

The objective of this procedure is to verify all electrical components of the Parking/holding brake system.

13. Passenger Doors

The objective of this procedure is to ensure the proper operation of the train doors.

14. Air Conditioning

Verify the voltage distribution to and correct operation of the HVAC system

15. Fire protection

The objective of this procedure is to verify the configuration of the fire detection units, as well as the presence of the safety resistor in the auxiliary converter.

16. Traction and Electric Brake

Verify all the train lines associated with the traction and electric brake systems of the train

18. Vehicle Normalization

The objective of this procedure is to ensure that all connectors, panels and covers are normalized.



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 2 – Energy Distribution

2.1 Instructions list

2.1.1 015_NRG-Energy Distribution

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|---------------------------|---------|
| 10001 | I | Energy Distribution (SPP=015) | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10002 | I | Initial Conditions | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10003 | I | All the Circuit Breakers should be OPEN | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10004 | I | Test bench should be connected with no active output voltage | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10005 | I | NO 400Vac should be connected to the car | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10006 | I | 110Vdc Circuit Breaker | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10007 | A | Close Circuit Breaker 15Q3 (Normal Line) | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10008 | I | 230Vac and 400Vac Circuit breakers | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10009 | A | Close Circuit Breaker 13Q1 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10010 | I | Normal and Permanent Power Supply | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10011 | I | 110Vdc Permanent Train Line Dev1/40 = END1 90XP24 pin 29 Dev5/40 = END2 90XP34 pin 29 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10012 | A | Force [NI] Dev1/40 = 1.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10013 | R | Read Defined Variable [NI] Dev5/40 = 1.0 | | OK | 1 | Tshembhani Khosa - 446920 | M1 |
| 10014 | A | Apply 110Vdc on the Normal Line using the external power supply | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10015 | A | Measure 110Vdc between 90XR50.X1/1 (+) and 90XR50.X2/1 (-) (intercar connector). [Normal line] | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10016 | I | Permanent Line Circuit Breakers | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10017 | A | Check for battery voltage (above 80Vdc) on Circuit Breaker 15Q4 and close it (permanent Line) | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10018 | I | 230Vac Circuit Breakers | | OK | | Tshembhani Khosa - 446920 | M1 |

| | | | | | | | |
|-------|---|---|--|----|--|---------------------------|----|
| 10019 | A | Close Circuit Breaker 13Q2 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10020 | A | Close Circuit Breaker 13Q3 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10021 | I | 230Vac and 400Vac Voltage Supply | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10022 | A | Apply 400Vac to the Vehicle on End 1 or End 2 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10023 | A | Perform a phase rotation measurement on Connector 90XR62 between phases U(X3),V(X2),W(X1) and ensure the rotation is in the correct direction | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10024 | R | Phase rotation between U,V,W is correct | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10025 | A | Perform a phase rotation measurement on Connector 90XR52_1 between phases U(X1),V(X2),W(X3) and ensure the rotation is in the correct direction | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10026 | R | Phase rotation between U,V,W is correct | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10027 | A | Check 230Vac between points L and N of socket -13XT1 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10028 | R | 230Vac present | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10029 | A | Check 230Vac between points L and N of socket -13XT2 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10030 | R | 230Vac present | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10031 | A | Remove the connector 57XP1_10 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10032 | A | Remove the connector 93XP150 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10033 | A | Close the circuit breaker 34Q1 and 57Q1 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10034 | A | Check 400Vac +-5% tolerance between Phases (W,V,U) on connector 57XP1_10 (10b1,10a2,10a1) | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10035 | R | 400Vac +- 5% tolerance is measured between all three phases on connector 93XP150 (E2,E3,E1) | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10036 | A | Check 400Vac +-5% tolerance between Phases (W,V,U) on connector 93XP150 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10037 | R | 400Vac +- 5% tolerance is measured between all three phases on circuit breaker 57Q1 | | OK | | Tshembhani Khosa - 446920 | M1 |

| | | | | | | | |
|-------|---|---|--|----|---|---------------------------|----|
| 10038 | A | Put back the connector 57XP1_10 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10039 | A | Put back the connector 93XP150 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10040 | I | Auxiliary Converters Command | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10041 | I | Battery Connection Train Lines Dev1/79 = END 1 90XR24 pin 30 Dev5/79 = END 2 90XP34 pin 30 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10042 | A | Force [NI] Dev1/79 = 1.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10043 | R | Read Defined Variable [NI] Dev5/79 = 1.0 | | OK | 1 | Tshembhani Khosa - 446920 | M1 |
| 10044 | A | Force [NI] Dev1/79 = 0.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10045 | R | Read Defined Variable [NI] Dev5/79 = 0.0 | | OK | 0 | Tshembhani Khosa - 446920 | M1 |
| 10046 | I | Battery Disconnection Train Lines Dev1/75 = END 1 90XR24 pin 31 Dev5/75 = END 2 90XP34 pin 31 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10047 | A | Force [NI] Dev1/75 = 1.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10048 | R | Read Defined Variable [NI] Dev5/75 = 1.0 | | OK | 1 | Tshembhani Khosa - 446920 | M1 |
| 10049 | A | Force [NI] Dev1/75 = 0.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10050 | R | Read Defined Variable [NI] Dev5/75 = 0.0 | | OK | 0 | Tshembhani Khosa - 446920 | M1 |
| 10051 | I | IES StatusTrain Lines Dev1/86 = END 1 90XR25 pin 61 Dev2/87 = END 1 90XR25 pin 62 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10052 | A | Force [NI] Dev1/86 = 1.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10053 | R | Read Defined Variable [NI] Dev2/87 = 1.0 | | OK | 1 | Tshembhani Khosa - 446920 | M1 |
| 10054 | A | Force [NI] Dev1/86 = 0.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10055 | R | Read Defined Variable [NI] Dev2/87 = 0.0 | | OK | 0 | Tshembhani Khosa - 446920 | M1 |
| 10056 | I | Switch off the 400Vac power supply at the socket | | OK | | Tshembhani Khosa - 446920 | M1 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 3 – TCMS Network

3.1 Instructions list

3.1.1 025_NET-TCMS Network

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|--------------------------|---------|
| 10001 | I | TCMS Network IO (SPP=25) | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10002 | I | Initial conditions | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10003 | I | Vehicle test bench should be configured as TC1: 1. TC1 Dataplugs 2. MCE switch set to TC1 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10004 | R | On DDU TCMS screen the TC1 cab is in BLUE colour | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10005 | I | Power Supply to the Router Switches | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10006 | I | Power supply to the 25A10 SWITCH ETHERNET (CRS1) | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10007 | A | Close Circuit Breaker 25Q10 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10008 | R | CRS1 25A10 is ON | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10009 | I | Power supply to the 25A11 SWITCH ETHERNET (CRS2) | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10010 | A | Close Circuit Breaker 25Q11 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10011 | R | CRS2 25A11 is ON | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10012 | I | Power supply to the 25A14 ETHERNET REPEATER (TBR) | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10013 | A | Close Circuit Breaker 25Q14 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10014 | R | TBR 25A14 is ON | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10015 | A | Close Circuit Breaker 25Q6 | | OK | | Tebogo Mtombeni - 529938 | M1 |

| | | | | | | | |
|-------|---|---|--|----|--|--------------------------|----|
| 10016 | A | Close Circuit Breaker 25Q7 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10017 | I | Ethernet Loop | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10018 | A | For each CRS, check that the Ethernet Loop LEDs are flashing | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10019 | R | CRS1 has LEDs on ports X3 and X4 flashing | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10020 | R | CRS2 has ONLY LED on port X4 flashing | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10021 | R | Check on the Test Bench DDU that all Router Switches are available on the network | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10022 | I | Power Supply to the BRIOMS | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10023 | I | Power supply to the 25A6 BRIOM 40/10 ETH 6 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10024 | R | BRIOM 25A6 is ON | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10025 | A | Check visually that ground braid is connected to BRIOM | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10026 | I | Power supply to the 25A7 BRIOM 40/10 ETH 7 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10027 | R | BRIOM 25A7 is ON | | OK | | Tebogo Mtombeni - 529938 | M1 |

Section 4 – Cabin Control

4.1 Instructions list

4.1.1 020_CAB-Cabin Control

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|--------------------------|---------|
| 10001 | I | Cabin Control (SPP=020) | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10002 | I | Train Lines | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10003 | I | Cab Selected on Train Lines Dev1/1 = END1 90XR24 pin 3 Dev5/1 = END2 90XP34 pin 3 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10004 | A | Force [NI] Dev1/1 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10005 | R | Read Defined Variable [NI] Dev5/1 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10006 | A | Force [NI] Dev1/1 = 0.0 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10007 | R | Read Defined Variable [NI] Dev5/1 = 0.0 | | OK | 0 | Tebogo Mtombeni - 529938 | M1 |
| 10008 | I | Cab Active TC1 Train Lines Dev1/2 = END1 90XR24 pin 4 Dev5/2 = END2 90XP34 pin 4 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10009 | A | Force [NI] Dev1/2 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10010 | R | Read Defined Variable [NI] Dev5/2 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10011 | A | Force [NI] Dev1/2 = 0.0 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10012 | R | Read Defined Variable [NI] Dev5/2 = 0.0 | | OK | 0 | Tebogo Mtombeni - 529938 | M1 |
| 10013 | I | Master Key TC1 Train Lines Dev1/73 = END1 90XR24 pin 17 Dev5/73 = END2 90XP34 pin 14 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10014 | A | Force [NI] Dev1/73 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10015 | R | Read Defined Variable [NI] Dev5/73 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10016 | A | Force [NI] Dev1/73 = 0.0 | | OK | | Tebogo Mtombeni - 529938 | M1 |

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.



| | | |
|---|--|-----------------------------|
| Serial Tests Report TS252 – M1 – VFT RTR Vehicle Functional Static Testing Report | Document Reference GIB0000007327 Version: A0 | Emission date 23/10/2024 |
|---|--|-----------------------------|

| | | | | | | | |
|-------|---|--|--|----|---|-----------------------------|----|
| 10017 | R | Read Defined Variable [NI] Dev5/73 = 0.0 | | OK | 0 | Tebogo Mtombeni - 529938 | M1 |
|-------|---|--|--|----|---|-----------------------------|----|



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 5 – Internal Lighting

5.1 Instructions list

5.1.1 052_LGT-Internal Lighting

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|---------------------------|---------|
| 10001 | I | Internal Lighting (SPP=052) | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10002 | I | Initial Conditions | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10003 | I | The 110Vdc Normal line is ON | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10004 | I | Cleaning Lighting Command | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10005 | I | 110Vdc Permanent Train Line Dev1/40 = END1 90XR24 pin 29 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10006 | A | Force [NI] Dev1/40 = 1.0 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10007 | A | Close Circuit Breaker 52Q5 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10008 | A | Close Circuit Breaker 52Q3 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10009 | A | Close Circuit Breaker 52Q4 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10010 | I | Lighting 33% Train Line Dev1/8 = END1 90XR25 pin 27 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10011 | A | Force [NI] Dev1/8 = 1.0 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10012 | R | The saloon RIGHT side emergency lights (low intensity) are ON on all light modules | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10013 | R | The saloon LEFT side emergency lights (low intensity) are ON on all light modules | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10014 | I | Lighting 33% Train Line Dev5/8 = END2 90XP35 pin 27 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10015 | R | Read Defined Variable [NI] Dev5/8 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10016 | I | Lighting 33% Train Line Dev1/8 = END1 90XR25 pin 27 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10017 | A | Force [NI] Dev1/8 = 0.0 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10018 | I | Lighting 33% Train Line Dev5/8 = END2 90XP35 pin 27 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10019 | R | Read Defined Variable [NI] Dev5/8 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |

| | | | | | | | |
|-------|---|---|--|----|---|---------------------------|----|
| 10020 | R | All saloon emergency lights (low intensity) are OFF on all light modules (Left+Right) | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10021 | A | Turn Cleaning Staff Lights Switch 52S6 to ON position | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10022 | I | Lighting 33% Train Line Dev5/8 = END2 90XP35 pin 27 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10023 | R | Read Defined Variable [NI] Dev5/8 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10024 | R | All saloon emergency lights (low intensity) are ON on all light modules (Left+Right) | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10025 | A | Reset Circuit Breaker 52Q5 (Open and Close) | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10026 | R | Read Defined Variable [NI] Dev5/8 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10027 | I | Main Lighting Command | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10028 | A | Close Circuit Breaker 52Q1 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10029 | A | Close Circuit Breaker 52Q2 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10030 | R | All saloon emergency lights (low intensity) are ON on all light modules (Left+Right) | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10031 | I | Lighting 33% Train Line Dev5/8 = END2 90XP25 pin 27 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10032 | R | Read Defined Variable [NI] Dev5/8 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10033 | I | Main Lighting Command Train Line Dev1/32 = END1 90XR25 pin 26 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10034 | A | Force [NI] Dev1/32 = 1.0 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10035 | I | Main Lighting Command Train Line Dev5/24 = END2 90XP35 pin 26 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10036 | R | Read Defined Variable [NI] Dev5/24 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10037 | R | The saloon LEFT side main lighting (high intensity) is ON on all light modules | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10038 | R | The saloon RIGHT side main lighting (high intensity) is ON on all light modules | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10039 | I | Main Lighting Command Train Line Dev1/32 = END1 90XR25 pin 26 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10040 | A | Force [NI] Dev1/32 = 0.0 | | OK | | Mphato Mphahlele - 480716 | M1 |



| | | |
|---|--|-----------------------------|
| Serial Tests Report TS252 – M1 – VFT RTR Vehicle Functional Static Testing Report | Document Reference GIB0000007327 Version: A0 | Emission date 23/10/2024 |
|---|--|-----------------------------|

| | | | | | | | |
|-------|---|--|--|----|--|---------------------------|----|
| 10041 | R | All saloon emergency lights (low intensity) are ON on all light modules (Left+Right) | | OK | | Mphato Mphahlele - 480716 | M1 |
|-------|---|--|--|----|--|---------------------------|----|



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024


Section 6 – Train-Ground Communication

6.1 Instructions list

6.1.1 062_ETS-ERTMS

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|---------------------------|---------|
| 10001 | I | ERTMS (SPP=062) | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10002 | I | ERTMS Bypass Train Lines Dev1/33 = END1 90XR24 pin 11 Dev5/37 = END2 90XP34 pin 11 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10003 | A | Force [NI] Dev1/33 = 1.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10004 | R | Read Defined Variable [NI] Dev5/37 = 1.0 | | OK | 1 | Tshembhani Khosa - 446920 | M1 |
| 10005 | A | Force [NI] Dev1/33 = 0.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10006 | R | Read Defined Variable [NI] Dev5/37 = 0.0 | | OK | 0 | Tshembhani Khosa - 446920 | M1 |
| 10007 | I | Emergency Brake ERTMS 1 Train Lines Dev1/88 = END1 90XR24 pin 18 Dev5/88 = END2 90XP34 pin 18 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10008 | A | Force [NI] Dev1/88 = 1.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10009 | R | Read Defined Variable [NI] Dev5/88 = 1.0 | | OK | 1 | Tshembhani Khosa - 446920 | M1 |
| 10010 | A | Force [NI] Dev1/88 = 0.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10011 | R | Read Defined Variable [NI] Dev5/88 = 0.0 | | OK | 0 | Tshembhani Khosa - 446920 | M1 |
| 10012 | I | Emergency Brake ERTMS 2 Train Lines Dev1/80 = END1 90XR24 pin 20 Dev5/80 = END2 90XP34 pin 20 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10013 | A | Force [NI] Dev1/80 = 1.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10014 | R | Read Defined Variable [NI] Dev5/80 = 1.0 | | OK | 1 | Tshembhani Khosa - 446920 | M1 |

| | | | | | | | |
|-------|---|--|---|----|---|---------------------------|----|
| 10015 | A | Force [NI] Dev1/80 = 0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10016 | R | Read Defined Variable [NI] Dev5/80 = 0 | | OK | 0 | Tshembhani Khosa - 446920 | M1 |
| 10017 | I | Wheel Sensor Continuity Test | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10018 | I | Use the multimeter to test the continuity | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10019 | A | Check continuity between [62B1 WHEEL SENSOR (Local:+MB2; Connector 62XP1_1) and Intercar(Local:+END2; connector 90XP33.c)] | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10020 | R | There is a continuity between: pin B & pin 2, pin A & pin 1, pin C & pin 7, pin D & pin 8 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10021 | R | There is a continuity between: pin F & pin 4, pin E & pin 3, pin G & pin 9, pin H & pin 10 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10022 | R | There is a continuity between: pin L & pin 6, pin K & pin 5, pin M & pin 11, pin N & pin 12 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10023 | I | Eurobalise Antenna Cable | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10024 | A | Check continuity between [Intercar(LOCAL: +END1; Connector - 90XR20) and Intercar (LOCAL:+END2; connector -90XP30)] according to the image below |  | OK | | Tshembhani Khosa - 446920 | M1 |
| 10025 | R | Eurobalise Antenna cable is correctly configured | | OK | | Tshembhani Khosa - 446920 | M1 |

6.1.2 064_COM-Train-Ground Communication

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|--------------------------|---------|
| 10001 | I | Train-Ground Communication (SPP=064) | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10002 | A | Using the tool list on the side of your screen, note the serial number of the antenna cable tester used in this procedure | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10003 | I | Antenna cable tester Calibration | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10004 | I | PERFORM THIS CALIBRATION BEFORE TESTING EACH CABLE | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10005 | A | Select "preset", then Set the test frequency by selecting "FREQ/DIST" then setting the start and stop frequency, select "calibrate", then "Full 1-port" then Calibrate the Antenna cable tester using the 0.5m extension cable and the T-calibration unit. | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10006 | I | GSM Cable | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10007 | A | Ensure the frequency range is 876MHz - 961.34MHz; Connect the GSM cable of the Netbox to the measuring cable and note the resulting waveform | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10008 | R | The maximum peak of the waveform is Result Max : x <= 2.13 () | | OK | 1.01 | Tebogo Mtombeni - 529938 | M1 |
| 10009 | A | Save the waveform result with the following name: TS#(#-Train number)_NBX_ GSM1 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10010 | A | Recalibrate the tester. Ensure the frequency range is 1.71GHz - 1.88Ghz; Connect the GSM cable of the Netbox to the measuring cable and note the resulting waveform | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10011 | R | The maximum peak of the waveform is Result Max : x <= 2.13 () | | OK | 1.34 | Tebogo Mtombeni - 529938 | M1 |
| 10012 | A | Save the waveform result with the following name: TS#(#-Train number)_NBX_ GSM2 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10013 | I | GPS Cable | | OK | | Tebogo Mtombeni - 529938 | M1 |

| | | | | | | | |
|-------|---|---|---|----|------|--------------------------|----|
| 10014 | A | Recalibrate the tester. Ensure the frequency range is 1200MHz - 1600MHz; Connect the GPS cable of the Netbox to the measuring cable and note the resulting waveform | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10015 | A | On the cable tester, select "MEAS" and select F1 "Distance to Fault" | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10016 | I | Ensure that the resulting waveform is such as in the picture on the right. The peak of the graph should be at a point >8m; before that, the graph should be flat. Maximum value before the peak should be 1.2 |  | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10017 | R | The maximum peak of the waveform is Result Max : x <= 1.2 () | | OK | 1.01 | Tebogo Mtombeni - 529938 | M1 |
| 10018 | A | Save the waveform result with the following name: TS#(#-Train number)_NBX_ GPS | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10019 | I | Wifi Cable | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10020 | A | Recalibrate the tester. Ensure the frequency range is 1710MHz - 2700MHz; Connect the WiFi cable of the Netbox to the measuring cable and note the resulting waveform | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10021 | R | The maximum peak of the waveform is Result Max : x <= 2.45 () | | OK | 1.35 | Tebogo Mtombeni - 529938 | M1 |
| 10022 | A | Save the waveform result with the following name: TS#(#-Train number)_NBX_ WiFi1 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10023 | A | Recalibrate the tester. Ensure the frequency range is 4.9GHz - 5.935GHz; | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10024 | R | The maximum peak of the waveform is Result Max : x <= 2.45 () | | OK | 2.3 | Tebogo Mtombeni - 529938 | M1 |
| 10025 | A | Save the waveform result with the following name: TS#(#-Train number)_NBX_ WiFi2 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10026 | A | Close Circuit Breaker 64Q1 | | OK | | Tebogo Mtombeni - 529938 | M1 |
| 10027 | R | Check that the Netbox turns ON | | OK | | Tebogo Mtombeni - 529938 | M1 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 7 – Pantograph


7.1 Instructions list

7.1.1 021_PNT-Pantograph

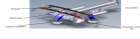
I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|---------------------------|---------|
| 10001 | I | Pantograph (SPP = 021) | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10002 | I | There should be no air in the main pipe | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10003 | R | Measure 0 Bar at point K2.8 using the pressure gauge | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10004 | A | Ensure that the pantograph isolation valve K2.5 is normalised (not isolated) | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10005 | I | Initial Conditions | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10006 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1drainingcockr1 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10007 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1drainingcockr2 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10008 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1auxcpcontactorr1 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10009 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1auxcpcontactorr2 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10010 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1auxpressswitchr1 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10011 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1auxpressswitchr2 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10012 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1earthpantor1 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10013 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1earthpantor2 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10014 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantoisolatedr1 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10015 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantoisolatedr2 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10016 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantorisedr1 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |

| | | | | | | |
|-------|---|---|----|---|------------------------------|----|
| 10017 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantorisedr2 = 0.0 | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10018 | I | Auxiliary Compressor | OK | | Mphato Mphahlele - 480716 | M1 |
| 10019 | A | Close Circuit Breaker 21Q1 | OK | | Mphato Mphahlele - 480716 | M1 |
| 10020 | A | Close Circuit Breaker 21Q2 | OK | | Mphato Mphahlele - 480716 | M1 |
| 10021 | A | Close Circuit Breaker 21Q3 | OK | | Mphato Mphahlele - 480716 | M1 |
| 10022 | R | The Auxiliary compressor 21M1 turns ON | OK | | Mphato Mphahlele - 480716 | M1 |
| 10023 | R | Read Defined Variable [TT] (MPU1)lo_pnt_m1startauxiliarcompr1 = 1.0 | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10024 | R | Read Defined Variable [TT] (MPU1)lo_pnt_m1startauxiliarcompr2 = 1.0 | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10025 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1auxcpcontactorr1 = 0.0 | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10026 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1auxcpcontactorr2 = 0.0 | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10027 | A | Force [TT] (MPU1)lo_pnt_m1raisepantor1 = 1.0 | OK | | Mphato Mphahlele - 480716 | M1 |
| 10028 | A | Allow the pressure to rise. Using the pressure gauge, check that the pressure at point K2.8 > 3.8Bar. (VERIFY BEFORE MOVING TO THE NEXT STEP) | OK | | Mphato Mphahlele - 480716 | M1 |
| 10029 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantorisedr1 = 1.0 | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10030 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantorisedr2 = 1.0 | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10031 | R | The pantograph is raised | OK | | Mphato Mphahlele - 480716 | M1 |
| 10032 | A | Allow the pressure to rise. Using the pressure gauge, check that the pressure at point K2.8 is between 6 - 7Bar. (VERIFY BEFORE MOVING TO THE NEXT STEP) | OK | | Mphato Mphahlele - 480716 | M1 |
| 10033 | R | The Auxiliary compressor 21M1 turns OFF | OK | | Mphato Mphahlele - 480716 | M1 |
| 10034 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1auxcpcontactorr1 = 1.0 | OK | 1 | Mphato Mphahlele - 480716 | M1 |

| | | | | | | | |
|-------|---|---|---|----|---|------------------------------|----|
| 10035 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1auxcpcontactorr2 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10036 | A | Turn the pantograph isolation valve K2.5 to isolated position | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10037 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1drainingcockr1 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10038 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1drainingcockr2 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10039 | A | Force [TT] (MPU1)lo_pnt_m1startauxiliarcompr1 = 0.0 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10040 | A | Force [TT] (MPU1)lo_pnt_m1startauxiliarcompr2 = 0.0 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10041 | A | Drain the air by putting the isolation valve K2.5 in half way position | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10042 | R | Using the pressure gauge, check that the Pantograph drops at 3.3 Bar. | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10043 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantorisedr1 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10044 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantorisedr2 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10045 | A | Turn the pantograph isolation valve K2.5 to normal position | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10046 | A | Release [TT] (MPU1)lo_pnt_m1startauxiliarcompr1 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10047 | A | Release [TT] (MPU1)lo_pnt_m1startauxiliarcompr2 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10048 | R | The Auxiliary compressor 21M1 turns ON | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10049 | A | Allow the pressure to rise. Using the pressure gauge, check that the pressure at point K2.8 is between 6 - 7Bar. (VERIFY BEFORE MOVING TO THE NEXT STEP) | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10050 | R | The Auxiliary compressor 21M1 turns OFF | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10051 | I | Isolation and Earthing | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10052 | A | In the HV Box , check that all the Green Keys are present. |  | OK | | Mphato Mphahlele - 480716 | M1 |

| | | | | | | | |
|-------|---|---|--|----|---|---------------------------|----|
| 10053 | A | In the HV Box , set the HVB1 valve to Isolated position - to isolate the pantograph | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10054 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantoisolatedr1 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10055 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantoisolatedr2 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10056 | A | Turn the Earthing Switch to grounded position | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10057 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1earthpantor1 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10058 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1earthpantor2 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10059 | A | Turn the Earthing Switch to back to Normal position | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10060 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1earthpantor1 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10061 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1earthpantor2 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10062 | A | Set the HVB1 valve to Normal position | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10063 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantoisolatedr1 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10064 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantoisolatedr2 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10065 | A | Normalize the HV box and remove all spare/duplicate keys (green/yellow/blue) | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10066 | I | Pantograph Mechanical Test | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10067 | I | Housed Height Measurement, Pantograph Over-Height Measurement, Automatic Drop Device and Control Force Test | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10068 | I | Initial Conditions | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10069 | I | There should be no air in the main pipe | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10070 | R | Measure 0 Bar at point K2.8 using the pressure gauge | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10071 | A | Ensure that the pantograph isolation valve K2.5 is normalised (not isolated) | | OK | | Mphato Mphahlele - 480716 | M1 |

| | | | | | | | |
|-------|---|---|---|----|-----|---------------------------|----|
| 10072 | I | Housed Height Measurement | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10073 | I | The purpose of this test is to ensure that the housed height of the pantograph complies with the specified dimensions The train must be positioned on a levelled track without any overhead catenary | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10074 | A | Measure the perpendicular height (using a measuring tape and ruler extended from points A, B and C of the pantohead) of the pantograph on natural housed position (between the roof of the train and the pantograph collector head at points A, B, C) |  | OK | | Mphato Mphahlele - 480716 | M1 |
| 10075 | A | Ensure that no part of the pantograph is higher than 486mm above the roof | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10076 | R | A Result Max : $x \leq 486$ (mm) | | OK | 484 | Mphato Mphahlele - 480716 | M1 |
| 10077 | R | B Result Max : $x \leq 486$ (mm) | | OK | 486 | Mphato Mphahlele - 480716 | M1 |
| 10078 | R | C Result Max : $x \leq 486$ (mm) | | OK | 484 | Mphato Mphahlele - 480716 | M1 |
| 10079 | A | Check that the centre of the pantograph head corresponds with the track centreline in the housed position (Use marked ruler to compare) | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10080 | R | Pantograph aligned with the track centreline in housed position | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10081 | I | Automatic Drop Device | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10082 | I | The purpose of this test is to verify the correct operation of the automatic drop device (ADD) and will be performed by simulating the activation of the ADD pressure switch. | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10083 | A | Tie a cable on pantograph head collector | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10084 | A | Close Circuit Breaker 21Q3 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10085 | A | Close Circuit Breaker 21Q1 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10086 | A | Close Circuit Breaker 21Q2 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10087 | R | The Auxiliary compressor 21M1 turns ON | | OK | | Mphato Mphahlele - 480716 | M1 |

| | | | | | | | |
|-------|---|---|---|----|--|------------------------------|----|
| 10088 | A | Force [TT] (MPU1)lo_pnt_m1raiseantor1 = 1.0 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10089 | I | Allow the pressure to rise, and the pantograph to raise | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10090 | R | The pantograph is raised | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10091 | A | Activate the ADD manually on the roof by operating the bleeding screw (PT3) on the pan head to simulate a loss of air supply |  | OK | | Mphato Mphahlele - 480716 | M1 |
| 10092 | R | The pressure of the test point PT12 drops to 0 bar | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10093 | A | On the roof, close the bleeding screw (PT3) to reset the ADD | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10094 | R | Fault reset and equipment normalized | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10095 | A | Release [TT] (MPU1)lo_pnt_m1raiseantor1 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10096 | R | Pantograph is lowered | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10097 | I | Pantograph Over-Height Measurement | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10098 | I | The purpose of the next test is to verify that the pantograph over-height detection and auto dropping functions are calibrated and work correctly. This test simulates the condition when a pantograph is incorrectly raised in an area without any overhead line | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10099 | I | You will be required to time the rising and dropping of the pantograph using a stopwatch. measure the time from the moment the pantograph starts to rise until the pantograph reaches maximum raised position; then time from the moment the pantograph starts dropping at overheight detection till it reaches housed position | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10100 | A | Use the rope to hook the pantograph and place the marked ruler perpendicular to the roof of the car. See the picture attached. |  | OK | | Mphato Mphahlele - 480716 | M1 |
| 10101 | A | Force [TT] (MPU1)lo_pnt_m1raiseantor1 = 1.0 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10102 | A | Whilst holding the end of the rope, allow the pressure to rise, and the pantograph to rise until it reaches the maximum | | OK | | Mphato Mphahlele - 480716 | M1 |

| | | | | | | | |
|-------|---|--|----|---|------------------------------|----|--|
| | | height marked on the ruler. | | | | | |
| 10103 | R | Rising time Result Max : $x \leq 10$ (S) | OK | 5 | Mphato Mphahlele - 480716 | M1 | |
| 10104 | A | By adjusting the rope, ensure that the Pantograph Panhead is aligned with the marking on the ruler. | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10105 | A | Adjust the Over-height valve such that when the panto goes above the marking on the ruler, the overheight must be detected. | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10106 | R | The over-height valve is adjusted correctly. | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10107 | A | Release [TT] (MPU1)lo_pnt_m1raisepantor1 | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10108 | R | Pantograph is lowered | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10109 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantorisedr1 = 0.0 | OK | 0 | Mphato Mphahlele - 480716 | M1 | |
| 10110 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantorisedr2 = 0.0 | OK | 0 | Mphato Mphahlele - 480716 | M1 | |
| 10111 | A | Force [TT] (MPU1)lo_pnt_m1raisepantor1 = 1.0 | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10112 | A | Allow the pantograph to rise freely until it reaches overheight. | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10113 | R | Overheight is detected immediately after passing the marked area on the ruler and pantograph begins to drop | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10114 | R | Lowering time Result Max : $x \leq 7$ (S) | OK | 7 | Mphato Mphahlele - 480716 | M1 | |
| 10115 | A | Release [TT] (MPU1)lo_pnt_m1raisepantor1 | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10116 | A | Reset over-height valve (PT2) on the roof | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10117 | R | Equipment normalized. (Only after resetting the PT2 valve, can the pantograph be raised) | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10118 | I | Control Force Test | OK | | Mphato Mphahlele - 480716 | M1 | |
| 10119 | I | The purpose of this test is to ensure that the pantograph maintains an acceptable force against the catenary wire over all operating heights | OK | | Mphato Mphahlele - 480716 | M1 | |

| | | | | | | | |
|-------|---|--|--|----|---|---------------------------|----|
| 10120 | A | Attach the dynamometer to the pantograph's head collector | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10121 | A | Raise the pantograph and measure the static force when the pantograph begins to rise after pulling the dynamometer up (lifting force on housed position) | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10122 | A | Force [TT] (MPU1)lo_pnt_m1raiseantor1 = 1.0 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10123 | I | Allow the pressure to rise, and the pantograph to raise | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10124 | R | The pantograph is raised | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10125 | R | F>150N | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10126 | A | Attach the 8.5kg (one 7.5kg and one 1kg) dead weight to the pantohead to apply a 85N force whilst the panto is in the raised position. | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10127 | R | The pantographs should remain in the neutral position | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10128 | A | Check that the centre of the pantograph head corresponds with the track centreline on maximum raised position | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10129 | R | Pantograph aligned with the track centreline in maximum raised position (Use marked ruler to compare) | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10130 | A | Remove 1kg dead weight | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10131 | R | Pantograph continues to rise to over height condition | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10132 | A | Remove the dynamometer and dead weights from the pantograph's head-collector | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10133 | A | Release [TT] (MPU1)lo_pnt_m1raiseantor1 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10134 | R | Pantograph is lowered | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10135 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantorisedr1 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10136 | R | Read Defined Variable [TT] (MPU1)li_pnt_m1pantorisedr2 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 8 – Rescue Mode and Emergency Disconnection

8.1 Instructions list

8.1.1 027_ERM-Rescue Mode and Emergency Disconnection

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|-------------------------|---------|
| 10001 | I | Rescue Mode and Emergency Disconnection (SPP=027) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10002 | I | Initial Conditions | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10003 | I | 110Vdc Normal power supply is connected to the vehicle, and switched ON | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10004 | I | Backup Mode Train Lines Dev1/29 = END1 90XR15 pin23 Dev5/33 = END2 90XP25 pin 23 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10005 | A | Force [NI] Dev1/29 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10006 | R | Read Defined Variable [NI] Dev5/33 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10007 | R | Relay 27K1 is Energised | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10008 | R | Relay 27K2 is De-energised | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10009 | A | Timer 30.0 S | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10010 | R | Relay 27K2 is De-energised | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10011 | A | Timer 30.0 S | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10012 | R | Relay 27K2 is energised | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10013 | I | Backup Mode Train Lines Dev1/29 = END1 90XR25 pin23 Dev5/33 = END2 90XP35 pin 23 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10014 | A | Force [NI] Dev1/29 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10015 | R | Read Defined Variable [NI] Dev5/33 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |

| | | | | | | | |
|-------|---|--|--|----|---|----------------------------|----|
| 10016 | R | Relay 27K1 is De-energised | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10017 | R | Relay 27K2 is De-energised | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10018 | I | Emergency Disconnection | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10019 | I | Emergency Disconnection Train Lines Dev1/30 = END1 90XR25 pin24 Dev5/34 = END2 90XP35 pin 24 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10020 | A | Force [NI] Dev1/30 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10021 | R | Read Defined Variable [NI] Dev5/34 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10022 | R | Relay 27K5 is Energised | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10023 | I | Emergency Disconnection Train Lines Dev1/30 = END1 90XR25 pin24 Dev5/34 = END2 90XP35 pin 24 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10024 | A | Force [NI] Dev1/30 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10025 | R | Read Defined Variable [NI] Dev5/34 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10026 | R | Relay 27K5 is De-energised | | OK | | Celiwe Sokhela - 491462 | M1 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 9 – Emergency Brake

9.1 Instructions list

9.1.1 044_UBK-Emergency Brake

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|---|---------------|--------------|-------------------------|---------|
| 10001 | I | Emergency Brake (SPP=044) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10002 | I | Initial Conditions | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10003 | I | No PEAs are activated | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10004 | I | 110Vdc Normal power supply should be connected to the vehicle and ON | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10005 | I | Visual Inspection | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10006 | A | Physically and visually inspect all the Disk Break Units (DBU) and brake pads, to ensure they are securely fitted |  | OK | | Celiwe Sokhela - 491462 | M1 |
| 10007 | R | All the brake DBUs are correctly installed and all the brake pads are correctly installed and locked | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10008 | A | Check the piping installation | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10009 | R | All the pipes are installed on the vehicle | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10010 | A | Check all the Passenger Emergency Alarm handles, and ensure they are connected to their respective connectors | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10011 | R | All the PEAs are installed and connected | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10012 | I | Train Lines | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10013 | I | Emergency Brake Loop Train Lines Dev1/5 = END1 90XR24 pin 8 Dev5/5 = END2 90XP34 pin 8 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10014 | A | Force [NI] Dev1/5 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10015 | R | Read Defined Variable [NI] Dev5/5 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10016 | A | Force [NI] Dev1/5 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10017 | R | Read Defined Variable [NI] Dev5/5 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10018 | I | Emergency Brake Loop Override Train Lines Dev1/6 = END1 90XR24 pin 9 | | OK | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | | |
|-------|---|--|----|---|--|-------------------------|----|
| | | Dev5/6 = END2 90XP34 pin 9 | | | | | |
| 10019 | A | Force [NI] Dev1/6 = 1.0 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10020 | R | Read Defined Variable [NI] Dev5/6 = 1.0 | OK | 1 | | Celiwe Sokhela - 491462 | M1 |
| 10021 | A | Force [NI] Dev1/6 = 0.0 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10022 | R | Read Defined Variable [NI] Dev5/6 = 0.0 | OK | 0 | | Celiwe Sokhela - 491462 | M1 |
| 10023 | I | Emergency Brake Train Line Train Lines Dev1/50 = END1 90XR25 pin 67 Dev5/61 = END2 90XP35 pin 67 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10024 | A | Force [NI] Dev1/50 = 1.0 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10025 | R | Read Defined Variable [NI] Dev5/61 = 1.0 | OK | 1 | | Celiwe Sokhela - 491462 | M1 |
| 10026 | A | Force [NI] Dev1/50 = 0.0 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10027 | R | Read Defined Variable [NI] Dev5/61 = 0.0 | OK | 0 | | Celiwe Sokhela - 491462 | M1 |
| 10028 | I | PEA Loop OTDR Train Lines Dev1/7 = END1 90XR24 pin 10 Dev5/7 = END2 90XP34 pin 10 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10029 | A | Force [NI] Dev1/7 = 1.0 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10030 | R | Read Defined Variable [NI] Dev5/7 = 1.0 | OK | 1 | | Celiwe Sokhela - 491462 | M1 |
| 10031 | A | Force [NI] Dev1/7 = 0.0 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10032 | R | Read Defined Variable [NI] Dev5/7 = 0.0 | OK | 0 | | Celiwe Sokhela - 491462 | M1 |
| 10033 | I | PEA Reset | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10034 | A | Check continuity on Timer Relay 44D1 between points A1 and B1 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10035 | R | The points are continuous | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10036 | A | Check continuity on Timer Relay 44D1 between points A4, B3 and C4 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10037 | R | All three points are continuous | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10038 | A | Close Circuit Breaker 44Q1 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10039 | I | PEA Loop Train Lines Dev1/58 = END1 90XR25 pin 95 Dev5/62 = END2 90XP35 pin 95 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10040 | A | Force [NI] Dev1/58 = 1.0 | OK | | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | |
|-------|---|--|----|---|-------------------------|----|
| 10041 | R | Read Defined Variable [NI] Dev5/62 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10042 | A | Force [NI] Dev1/58 = 0.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10043 | R | Read Defined Variable [NI] Dev5/62 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10044 | A | Force [NI] Dev1/58 = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10045 | A | Activate the PEA on door 5 (44S15) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10046 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10047 | R | Read Defined Variable [NI] Dev5/62 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10048 | A | Reset the PEA using square key | OK | | Celiwe Sokhela - 491462 | M1 |
| 10049 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10050 | R | Read Defined Variable [NI] Dev5/62 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10051 | A | Activate the PEA on door 3 (44S13) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10052 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10053 | R | Read Defined Variable [NI] Dev5/62 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10054 | A | Reset the PEA using square key | OK | | Celiwe Sokhela - 491462 | M1 |
| 10055 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10056 | R | Read Defined Variable [NI] Dev5/62 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10057 | A | Activate the PEA on door 1 (44S11) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10058 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10059 | R | Read Defined Variable [NI] Dev5/62 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10060 | A | Reset the PEA using square key | OK | | Celiwe Sokhela - 491462 | M1 |
| 10061 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | |
|-------|---|--|----|---|-------------------------|----|
| 10062 | R | Read Defined Variable [NI] Dev5/62 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10063 | A | Activate the PEA on door 2 (44S12) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10064 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10065 | R | Read Defined Variable [NI] Dev5/62 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10066 | A | Reset the PEA using square key | OK | | Celiwe Sokhela - 491462 | M1 |
| 10067 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10068 | R | Read Defined Variable [NI] Dev5/62 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10069 | A | Activate the PEA on door 4 (44S14) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10070 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10071 | R | Read Defined Variable [NI] Dev5/62 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10072 | A | Reset the PEA using square key | OK | | Celiwe Sokhela - 491462 | M1 |
| 10073 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10074 | R | Read Defined Variable [NI] Dev5/62 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10075 | A | Activate the PEA on door 6 (44S16) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10076 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10077 | R | Read Defined Variable [NI] Dev5/62 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10078 | A | Reset the PEA using square key | OK | | Celiwe Sokhela - 491462 | M1 |
| 10079 | I | PEA Loop Train Lines Dev5/62 = END2 90XP25 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10080 | R | Read Defined Variable [NI] Dev5/62 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10081 | I | PEA Loop Train Lines Dev1/58 = END1 90XR15 pin 95 | OK | | Celiwe Sokhela - 491462 | M1 |



| | | |
|---|--|-----------------------------|
| Serial Tests Report TS252 – M1 – VFT RTR Vehicle Functional Static Testing Report | Document Reference GIB0000007327 Version: A0 | Emission date 23/10/2024 |
|---|--|-----------------------------|

| | | | | | | | |
|-------|---|-------------------------|--|----|--|----------------------------|----|
| 10082 | A | Force [N] Dev1/58 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
|-------|---|-------------------------|--|----|--|----------------------------|----|



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0


Emission date
23/10/2024

Section 10 – Service Brake

10.1 Instructions list

10.1.1 040_SBK-Service Brake

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|---|---------------|--------------|-------------------------|---------|
| 10001 | I | Service Brake (SPP=040) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10002 | I | Initial Conditions | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10003 | I | No air supply to the vehicle | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10004 | I | All BPM cocks are in normal position (not isolated) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10005 | I | 110Vdc Normal power supply should be connected to the vehicle and ON | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10006 | I | Follow the procedure in the document below to upload software onto the TBCU electronic |  | OK | | Celiwe Sokhela - 491462 | M1 |
| 10007 | I | Power Supply | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10008 | A | Remove the connector 10XR12_XCB2 from the propulsion box | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10009 | A | Close Circuit Breaker 33Q1, 33Q3 and 33Q5 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10010 | A | Check the voltage on connector 10XR12_XCB2 between pins 4 (+) and 69 (-) ; 4(+) and 67(-); and 5(+) and 68(-) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10011 | R | Battery voltage (above 80Vdc) is measured on connector 10XR12_XCB2 between pins 4 (+) and 69 (-) ; 4(+) and 67(-); and 5(+) and 68(-) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10012 | A | Open Circuit Breaker 33Q1 and 33Q3, Replace connector 10XR12_XCB2 on the propulsion box, and Close Circuit breaker 33Q1 and 33Q3 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10013 | A | Remove the connector -40XP2_C2_16 from pneumatic BPM | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10014 | A | Close Circuit Breaker 40Q1 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10015 | A | Check the voltage on connector 40XP2_C2_16 between pins 13 (+) and 31 (-) | | OK | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | | |
|-------|---|---|----|---|--|-------------------------|----|
| 10016 | R | Battery voltage (above 80Vdc) is measured on connector 40XP2_C2_16 between pins 13 (+) and 31 (-) | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10017 | A | Open Circuit Breaker 40Q1, Replace connector -40XP2_C2_16 on the pneumatic BPM, and Close Circuit breaker -40Q1 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10018 | R | The pneumatic BPM 40A2 is ON | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10019 | I | Brake Air Supply and Brake Application | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10020 | I | EB Reduced Train Lines Dev2/85 = END1 90XR25 pin 60 Dev5/51 = END2 90XP35 pin 60 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10021 | R | Read Defined Variable [NI] Dev2/85 = 1.0 | OK | 1 | | Celiwe Sokhela - 491462 | M1 |
| 10022 | R | Read Defined Variable [NI] Dev5/51 = 1.0 | OK | 1 | | Celiwe Sokhela - 491462 | M1 |
| 10023 | I | Brake Applied Train Lines Dev2/83 = END1 90XR25 pin 50 Dev5/49 = END2 90XP35 pin 50 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10024 | R | Read Defined Variable [NI] Dev2/83 = 0.0 | OK | 0 | | Celiwe Sokhela - 491462 | M1 |
| 10025 | R | Read Defined Variable [NI] Dev5/49 = 0.0 | OK | 0 | | Celiwe Sokhela - 491462 | M1 |
| 10026 | R | Read Defined Variable [TT] (MPU1)li_sbk_m1brakeairsuppokr1 = 0.0 | OK | 0 | | Celiwe Sokhela - 491462 | M1 |
| 10027 | R | Read Defined Variable [TT] (MPU1)li_sbk_m1brakeairsuppokr2 = 0.0 | OK | 0 | | Celiwe Sokhela - 491462 | M1 |
| 10028 | R | Read Defined Variable [TT] (TBCU1)LI_BRPS_NOK = 1.0 | OK | 1 | | Celiwe Sokhela - 491462 | M1 |
| 10029 | R | Read Defined Variable [TT] (TBCU1)LI_BRAKE_NOT_APPLIED = 1.0 | OK | 1 | | Celiwe Sokhela - 491462 | M1 |
| 10030 | A | Close/Isolate the Isolation cock F2.1/3 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10031 | A | Open the Isolation cock F2.2/3 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10032 | A | Connect the air supply to the vehicle main pipe coupling flexible hose F3/5, and switch the supply ON | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10033 | I | Take note of any air leaks in the pipes or valves | OK | | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | | |
|-------|---|--|--|----|---|-------------------------|----|
| 10034 | A | Allow the pressure to go above 6 bar. The pressure can be checked at the BRTP test point | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10035 | R | BRTP pressure is measured >=6 Bar | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10036 | I | Brake Applied Train Lines Dev2/83 = END1 90XR25 pin 50 Dev5/49 = END2 90XP35 pin 50 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10037 | R | Read Defined Variable [NI] Dev2/83 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10038 | R | Read Defined Variable [NI] Dev5/49 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10039 | R | Read Defined Variable [TT] (MPU1)li_sbk_m1brakeairsuppokr1 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10040 | R | Read Defined Variable [TT] (MPU1)li_sbk_m1brakeairsuppokr2 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10041 | R | Read Defined Variable [TT] (TBCU1)LI_BRPS_NOK = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10042 | R | Read Defined Variable [TT] (TBCU1)LI_BRAKE_NOT_APPLIED = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10043 | I | Remote Isolation | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10044 | I | Remote Isolation Train Lines Dev1/84 = END1 90XR25 pin 59 Dev5/50 = END2 90XP35 pin 59 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10045 | A | Force [NI] Dev1/84 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10046 | R | Read Defined Variable [NI] Dev5/50 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10047 | R | Read Defined Variable [TT] (TBCU1)LI_BRAKE_ISO = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10048 | A | Force [TT] (MPU1)lo_sbk_m1isobrake = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10049 | R | Read Defined Variable [TT] (TBCU1)LI_BRAKE_ISO = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10050 | I | Remote Isolation Train Lines Dev5/50 = END2 90XP35 pin 59 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10051 | R | Read Defined Variable [NI] Dev5/50 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10052 | A | Release [TT] (MPU1)lo_sbk_m1isobrake | | OK | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | |
|-------|---|--|----|---|-------------------------|----|
| 10053 | R | Read Defined Variable [NI] Dev5/50 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10054 | R | Read Defined Variable [TT] (TBCU1)Li_BRAKE_ISO = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10055 | I | Remote Isolation Train Lines Dev1/84 = END1 90XR25 pin 59 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10056 | A | Force [NI] Dev1/84 = 0.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10057 | I | Manual Isolation | OK | | Celiwe Sokhela - 491462 | M1 |
| 10058 | I | EB Reduced Train Lines Dev2/85 = END1 90XR25 pin 60 Dev5/51 = END2 90XP35 pin 60 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10059 | R | Read Defined Variable [NI] Dev2/85 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10060 | R | Read Defined Variable [NI] Dev5/51 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10061 | R | Read Defined Variable [TT] (MPU1)li_sbk_m1servicebrakedc = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10062 | R | Read Defined Variable [TT] (TBCU1)Li_ServiceBrakeDC = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10063 | A | Close the Isolation cock C2.3.1 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10064 | I | EB Reduced Train Lines Dev2/85 = END1 90XR25 pin 60 Dev5/51 = END2 90XP35 pin 60 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10065 | R | Read Defined Variable [NI] Dev2/85 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10066 | R | Read Defined Variable [NI] Dev5/51 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10067 | R | Read Defined Variable [TT] (MPU1)li_sbk_m1servicebrakedc = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10068 | R | Read Defined Variable [TT] (TBCU1)Li_ServiceBrakeDC = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10069 | A | Re-open the Isolation cock C2.3.1 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10070 | R | Read Defined Variable [TT] (MPU1)li_sbk_m1servicebrakedc = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10071 | I | Switch OFF 400V before reading the bcufault variable | OK | | Celiwe Sokhela - 491462 | M1 |
| 10072 | R | Read Defined Variable [TT] (MPU1)li_sbk_m1bcufault = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |



| | | | | | | | |
|-------|---|---|--|----|---|----------------------------|----|
| 10073 | A | Force [TT] (TBCU1)LO_BRK_FLT = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10074 | R | Read Defined Variable [TT] (MPU1)li_sbk_m1bcufault = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10075 | A | Release [TT] (TBCU1)LO_BRK_FLT | | OK | | Celiwe Sokhela - 491462 | M1 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 11 – Holding and Parking Brake

11.1 Instructions list

11.1.1 045_PBK-Holding and Parking Brake

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|-------------------------|---------|
| 10001 | I | Holding and Parking Brake (SPP_045) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10002 | I | Initial Conditions | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10003 | I | Using the tools list on the side of your screen, record the serial number of the manometer that will be used in this test | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10004 | I | Check that the pressure on Test point C2.11/1 is >5bar | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10005 | I | Visual Inspection | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10006 | A | Check the installation of the manual parking brake release components (lever + cable) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10007 | R | The lever is securely fixed (tight) and the cable is correctly attached to the bogie (there is no excess cable and all clamps are installed) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10008 | I | Circuit Breakers | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10009 | I | Circuit Breaker 33Q3 and 33Q5 should be closed | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10010 | I | Parking Brake Pressure Switch | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10011 | R | Read Defined Variable [TT] (TBCU1)LI_PARK_BR_RELEASE = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10012 | R | Read Defined Variable [TT] (TBCU1)LI_BRAKE_STAT = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10013 | R | Read Defined Variable [TT] (MPU1)TBCU1_parkbrakerelease = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10014 | R | Read Defined Variable [TT] (MPU1)tbcu1_li_pbrake_stat = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10015 | I | Parking Brake Applied Train Lines Dev2/52 = END1 90XR25 pin 77 Dev5/58 = END2 90XP35 pin 77 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10016 | R | Read Defined Variable [NI] Dev2/52 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |

| | | | | | | |
|-------|---|---|----|---|-------------------------|----|
| 10017 | R | Read Defined Variable [NI] Dev5/58 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10018 | I | Parking Brake Applied | OK | | Celiwe Sokhela - 491462 | M1 |
| 10019 | I | For this section of the test, ensure that the pressure on test point C2.11/1 is ALWAYS BELOW 4.8 Bar. if it goes above, turn the Isolation cock C2.3.2 to CLOSE position to drain the air | OK | | Celiwe Sokhela - 491462 | M1 |
| 10020 | A | Position the Isolation cock C2.3.2 in CLOSE position. Allow the parking brake air pressure to drain to below 4.5 Bar. Use the test point C2.11/1 to verify the air pressure <4.5 Bar | OK | | Celiwe Sokhela - 491462 | M1 |
| 10021 | R | Pressure at test point C2.11/1 <4.5 Bar | OK | | Celiwe Sokhela - 491462 | M1 |
| 10022 | R | Read Defined Variable [TT] (TBCU1)LI_PARK_BR_RELEASE = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10023 | R | Read Defined Variable [TT] (MPU1)TBCU1_parkbrakerelease = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10024 | A | Return the Isolation cock C2.3.2 to OPEN position | OK | | Celiwe Sokhela - 491462 | M1 |
| 10025 | R | Read Defined Variable [TT] (TBCU1)LI_BRAKE_STAT = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10026 | R | Read Defined Variable [TT] (MPU1)tbcu1_li_pbrake_stat = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10027 | R | Read Defined Variable [TT] (TBCU1)LI_PARK_BR_DC = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10028 | R | Read Defined Variable [TT] (MPU1)TBCU1_parkbrakeisoldc = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10029 | R | Read Defined Variable [TT] (MPU1)li_pbk_m1parkbrakeisol = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10030 | I | Parking Brake Applied Train Lines Dev2/52 = END1 90XR25 pin 77 Dev5/58 = END2 90XP35 pin 77 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10031 | R | Read Defined Variable [NI] Dev2/52 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10032 | R | Read Defined Variable [NI] Dev5/58 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10033 | A | Position the Isolation cock C2.3.2 in CLOSE position | OK | | Celiwe Sokhela - 491462 | M1 |
| 10034 | R | Read Defined Variable [TT] (MPU1)li_pbk_m1parkbrakeisol = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |

| | | | | | | |
|-------|---|---|----|---|----------------------------|----|
| 10035 | R | Read Defined Variable [TT] (TBCU1)LI_BRAKE_STAT = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10036 | R | Read Defined Variable [TT] (MPU1)tbcu1_li_pbrake_stat = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10037 | R | Read Defined Variable [TT] (TBCU1)LI_PARK_BR_DC = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10038 | R | Read Defined Variable [TT] (MPU1)TBCU1_parkbrakeisoldc = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10039 | I | Parking Brake Applied Train Lines Dev2/52 = END1 90XR25 pin 77 Dev5/58 = END2 90XP35 pin 77 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10040 | R | Read Defined Variable [NI] Dev2/52 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10041 | R | Read Defined Variable [NI] Dev5/58 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10042 | A | Return the Isolation cock C2.3.2 to OPEN position | OK | | Celiwe Sokhela - 491462 | M1 |
| 10043 | I | Remote Parking Brake Command | OK | | Celiwe Sokhela - 491462 | M1 |
| 10044 | I | Remote Parking Brake Command Train Lines Dev1/51 = END1 90XR25 pin 68 Dev5/57 = END2 90XP35 pin 68 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10045 | A | Force [NI] Dev1/51 = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10046 | R | Read Defined Variable [NI] Dev5/57 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10047 | R | Confirm that the parking brake is applied, and air is released from electro valve C2.5 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10048 | I | Remote Parking Brake Command Train Lines Dev1/51 = END1 90XR25 pin 68 Dev5/57 = END2 90XP35 pin 68 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10049 | A | Force [NI] Dev1/51 = 0.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10050 | R | Read Defined Variable [NI] Dev5/57 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10051 | R | Confirm that electro valve C2.5 has stopped emitting air | OK | | Celiwe Sokhela - 491462 | M1 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 12 – Passenger Doors

12.1 Instructions list

12.1.1 050_DOR-Passenger Doors

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|-------------------------|---------|
| 10001 | I | Passenger Doors (SPP=050) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10002 | I | Initial conditions | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10003 | I | 110Vdc Normal power supply is connected to the vehicle and ON | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10004 | I | Ensure that the TCMS network is functional | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10005 | I | Circuit Breakers | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10006 | A | Close Circuit Breaker 50Q1 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10007 | R | DCU 1 is powered ON | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10008 | R | Check on the DDU that DCU1 is online | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10009 | A | Close Circuit Breaker 50Q2 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10010 | R | DCU 2 is powered ON | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10011 | R | Check on the DDU that DCU2 is online | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10012 | A | Close Circuit Breaker 50Q3 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10013 | R | DCU 3 is powered ON | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10014 | R | Check on the DDU that DCU3 is online | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10015 | A | Close Circuit Breaker 50Q4 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10016 | R | DCU 4 is powered ON | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10017 | R | Check on the DDU that DCU4 is online | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10018 | A | Close Circuit Breaker 50Q5 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10019 | R | DCU 5 is powered ON | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10020 | R | Check on the DDU that DCU5 is online | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10021 | A | Close Circuit Breaker 50Q6 | | OK | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | | |
|-------|---|---|---|----|---|-------------------------|----|
| 10022 | R | DCU 6 is powered ON | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10023 | R | Check on the DDU that DCU6 is online | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10024 | A | Close Circuit Breaker 50Q7 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10025 | I | Car ID Code | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10026 | A | Using the DDU on the test bench, check that all the doors on M1 are available - as in the picture attached. |  | OK | | Celiwe Sokhela - 491462 | M1 |
| 10027 | R | All doors are available | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10028 | I | Door Open and Close - Safety Loop | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10029 | I | ERTMS Auth Left Train Lines Dev1/81 = END1 90XR25 pin 44 Dev5/86 = END2 90XP35 pin 44 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10030 | A | Force [NI] Dev1/81 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10031 | R | Read Defined Variable [NI] Dev5/86 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10032 | A | Force [NI] Dev1/81 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10033 | R | Read Defined Variable [NI] Dev5/86 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10034 | I | ERTMS Auth RightTrain Lines Dev1/82 = END1 90XR25 pin 47 Dev5/87 = END2 90XP35 pin 47 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10035 | A | Force [NI] Dev1/82 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10036 | R | Read Defined Variable [NI] Dev5/87 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10037 | A | Force [NI] Dev1/82 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10038 | R | Read Defined Variable [NI] Dev5/87 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10039 | I | Doors Open Train Lines Dev1/49 = END1 90XR25 pin 66 Dev5/55 = END2 90XP35 pin 66 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10040 | A | Force [NI] Dev1/49 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10041 | R | Read Defined Variable [NI] Dev5/55 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10042 | A | Force [NI] Dev1/49 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10043 | R | Read Defined Variable [NI] Dev5/55 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10044 | I | Door Close Right Train Lines Dev1/53 = END1 90XR25 pin 78 | | OK | | Celiwe Sokhela - 491462 | M1 |

| Test ID | Category | Description | Result | Count | Reference | Mode |
|---------|----------|---|--------|-------|-------------------------|------|
| | | Dev5/59 = END2 90XP35 pin 78 | | | | |
| 10045 | A | Force [NI] Dev1/53 = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10046 | R | Read Defined Variable [NI] Dev5/59 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10047 | A | Force [NI] Dev1/53 = 0.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10048 | R | Read Defined Variable [NI] Dev5/59 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10049 | I | Door Close Left Train Lines Dev1/54 = END1 90XR25 pin 79 Dev5/60 = END2 90XP35 pin 79 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10050 | A | Force [NI] Dev1/54 = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10051 | R | Read Defined Variable [NI] Dev5/60 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10052 | A | Force [NI] Dev1/54 = 0.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10053 | R | Read Defined Variable [NI] Dev5/60 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10054 | I | Door Auth Left Train Lines Dev1/56 = END1 90XR25 pin 85 Dev5/64 = END2 90XP35 pin 85 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10055 | A | Force [NI] Dev1/56 = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10056 | R | Read Defined Variable [NI] Dev5/64 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10057 | I | Door Auth Right Train Lines Dev1/55 = END1 90XR25 pin 84 Dev5/61 = END2 90XP35 pin 84 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10058 | A | Force [NI] Dev1/64 = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10059 | R | Read Defined Variable [NI] Dev5/56 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10060 | I | V<3km/h Train Lines Dev1/35 = END1 90XR25 pin 29 Dev5/39 = END2 90XP35 pin 29 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10061 | A | Force [NI] Dev1/35 = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10062 | R | Read Defined Variable [NI] Dev5/39 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10063 | A | Force [TT] (MPU1)lo_dor_m1opendoorleft = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10064 | A | Force [TT] (MPU1)lo_dor_m1opendoorright = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10065 | R | Check that ALL doors are OPEN | OK | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | | |
|-------|---|--|----|------|--|----------------------------|----|
| 10066 | I | Door Auth Left Train Lines Dev1/56 = END1 90XR25 pin 85 Dev5/64 = END2 90XP35 pin 85 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10067 | A | Force [NI] Dev1/56 = 0.0 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10068 | R | Read Defined Variable [NI] Dev5/64 = 0.0 | OK | 0 | | Celiwe Sokhela - 491462 | M1 |
| 10069 | I | Door Auth Right Train Lines Dev1/64 = END1 90XR25 pin 84 Dev5/56 = END2 90XP35 pin 84 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10070 | A | Force [NI] Dev1/64 = 0.0 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10071 | R | Read Defined Variable [NI] Dev5/56 = 0.0 | OK | 0 | | Celiwe Sokhela - 491462 | M1 |
| 10072 | R | Check that ALL doors are CLOSED | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10073 | I | Safety Doors Loop Train Lines Dev1/59 = END1 90XR25 pin 96 Dev5/89 = END2 90XP35 pin 96 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10074 | A | Force [NI] Dev1/59 = 1.0 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10075 | R | Read Defined Variable [NI] Dev5/89 = 1.0 | OK | 1 | | Celiwe Sokhela - 491462 | M1 |
| 10076 | I | Left Side Doors | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10077 | I | Door 1 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10078 | I | Door Auth Left Train Lines Dev1/56 = END1 90XR25 pin 85 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10079 | A | Force [NI] Dev1/56 = 1.0 | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10080 | R | Check if ALL Left doors opens in 3 sec (+1/-0) | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10081 | R | Check that the GREEN leds on both sides of the door blink while the door opens [Safety Request: Prasa8-05] | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10082 | I | Door Opening Gap | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10083 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door) | OK | | | Celiwe Sokhela - 491462 | M1 |
| 10084 | R | Door 1 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1396 | | Celiwe Sokhela - 491462 | M1 |
| 10085 | A | Measure the opening gap of the door. (This measurement must be done at the top of the door) | OK | | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | |
|-------|---|--|----|------|----------------------------|----|
| 10086 | R | Door 1 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1410 | Celiwe Sokhela - 491462 | M1 |
| 10087 | A | Measure the opening gap of the door. (This measurement must be done in the middle of the door) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10088 | R | Door 1 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1398 | Celiwe Sokhela - 491462 | M1 |
| 10089 | I | Door 3 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10090 | I | Door Opening Gap | OK | | Celiwe Sokhela - 491462 | M1 |
| 10091 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10092 | R | Door 3 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1396 | Celiwe Sokhela - 491462 | M1 |
| 10093 | A | Measure the opening gap of the door. (This measurement must be done at the top of the door) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10094 | R | Door 3 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1408 | Celiwe Sokhela - 491462 | M1 |
| 10095 | A | Measure the opening gap of the door. (This measurement must be done in the middle of the door) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10096 | R | Door 3 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1398 | Celiwe Sokhela - 491462 | M1 |
| 10097 | I | Door 5 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10098 | I | Door Opening Gap | OK | | Celiwe Sokhela - 491462 | M1 |
| 10099 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10100 | R | Door 5 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1396 | Celiwe Sokhela - 491462 | M1 |
| 10101 | A | Measure the opening gap of the door. (This measurement must be done at the top of the door) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10102 | R | Door 5 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1410 | Celiwe Sokhela - 491462 | M1 |
| 10103 | A | Measure the opening gap of the door. (This measurement must be done in the | OK | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | | |
|-------|---|--|----|------|----------------------------|----|--|
| | | middle of the door). | | | | | |
| 10104 | R | Door 5 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1398 | Celiwe Sokhela - 491462 | M1 | |
| 10105 | I | Door Auth Left Train Lines Dev1/56 = END1 90XR15 pin 85 | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10106 | A | Force [NI] Dev1/56 = 0.0 | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10107 | R | Check if ALL Left doors closes in 3 sec (+1/-0) | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10108 | R | Check that the RED leds on both sides of the door blink while the door closes [Safety Request: Prasa8-05] | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10109 | I | Safety Doors Loop Train Lines Dev5/89 = END2 90XP35 pin 96 | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10110 | R | Read Defined Variable [NI] Dev5/89 = 1.0 | OK | 1 | Celiwe Sokhela - 491462 | M1 | |
| 10111 | I | Right Side Doors | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10112 | I | Door 2 | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10113 | I | Door Auth Right Train Lines Dev1/64 = END1 90XR25 pin 84 | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10114 | A | Force [NI] Dev1/64 = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10115 | R | Check if ALL Left doors opens in 3 sec (+1/-0) | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10116 | R | Check that the GREEN leds on both sides of the door blink while the door opens [Safety Request: Prasa8-05] | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10117 | I | Door Opening Gap | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10118 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door) | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10119 | R | Door 2 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1396 | Celiwe Sokhela - 491462 | M1 | |
| 10120 | A | Measure the opening gap of the door. (This measurement must be done at the top of the door) | OK | | Celiwe Sokhela - 491462 | M1 | |
| 10121 | R | Door 2 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1410 | Celiwe Sokhela - 491462 | M1 | |

| | | | | | | | |
|-------|---|---|--|----|------|----------------------------|----|
| 10122 | A | Measure the opening gap of the door. (This measurement must be done in the middle of the door) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10123 | R | Door 2 gap Result Min/Max : 1390<= x <= 1410 (mm) | | OK | 1398 | Celiwe Sokhela - 491462 | M1 |
| 10124 | I | Door 4 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10125 | I | Door Opening Gap | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10126 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10127 | R | Door 4 gap Result Min/Max : 1390<= x <= 1410 (mm) | | OK | 1396 | Celiwe Sokhela - 491462 | M1 |
| 10128 | A | Measure the opening gap of the door. (This measurement must be done at the top of the door) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10129 | R | Door 4 gap Result Min/Max : 1390<= x <= 1410 (mm) | | OK | 1408 | Celiwe Sokhela - 491462 | M1 |
| 10130 | A | Measure the opening gap of the door. (This measurement must be done in the middle of the door) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10131 | R | Door 4 gap Result Min/Max : 1390<= x <= 1410 (mm) | | OK | 1398 | Celiwe Sokhela - 491462 | M1 |
| 10132 | I | Door 6 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10133 | I | Door Opening Gap | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10134 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10135 | R | Door 6 gap Result Min/Max : 1390<= x <= 1410 (mm) | | OK | 1396 | Celiwe Sokhela - 491462 | M1 |
| 10136 | A | Measure the opening gap of the door. (This measurement must be done at the top of the door) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10137 | R | Door 6 gap Result Min/Max : 1390<= x <= 1410 (mm) | | OK | 1409 | Celiwe Sokhela - 491462 | M1 |
| 10138 | A | Measure the opening gap of the door. (This measurement must be done in the middle of the door) | | OK | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | |
|-------|---|---|----|------|-------------------------|----|
| 10139 | R | Door 6 gap Result Min/Max : 1390<= x <= 1410 (mm) | OK | 1398 | Celiwe Sokhela - 491462 | M1 |
| 10140 | I | Obstacle Detection | OK | | Celiwe Sokhela - 491462 | M1 |
| 10141 | I | Door Auth Left Train Lines Dev1/56 = END1 90XR25 pin 85 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10142 | A | Force [NI] Dev1/56 = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10143 | R | Check if ALL Left doors opens in 3 sec (+1/-0) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10144 | R | Position an obstacle on the floor in the centre of each and every door closing line | OK | | Celiwe Sokhela - 491462 | M1 |
| 10145 | I | Door Auth Train Lines Dev1/64 = END1 90XR25 pin 84 (Right) Dev1/56 = END1 90XR25 pin 85 (Left) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10146 | A | Force [NI] Dev1/64 = 0.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10147 | A | Force [NI] Dev1/56 = 0.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10148 | R | All doors will hit the obstacles, reopen and try to close again 3 times. On the third attempt ALL doors will stop and stand adjar - free to be opened manually | OK | | Celiwe Sokhela - 491462 | M1 |
| 10149 | I | Safety Doors Loop Train Lines Dev5/89 = END2 90XP35 pin 96 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10150 | R | Read Defined Variable [NI] Dev5/89 = 0.0 | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10151 | I | Door Auth Train Lines Dev1/64 = END1 90XR25 pin 84 (Right) Dev1/56 = END1 90XR25 pin 85 (Left) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10152 | A | Force [NI] Dev1/64 = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10153 | A | Force [NI] Dev1/56 = 1.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10154 | R | ALL doors opens fully | OK | | Celiwe Sokhela - 491462 | M1 |
| 10155 | A | Remove the obstacles | OK | | Celiwe Sokhela - 491462 | M1 |
| 10156 | I | Door Auth Train Lines Dev1/64 = END1 90XR25 pin 84 (Right) Dev1/56 = END1 90XR25 pin 85 (Left) | OK | | Celiwe Sokhela - 491462 | M1 |
| 10157 | A | Force [NI] Dev1/64 = 0.0 | OK | | Celiwe Sokhela - 491462 | M1 |
| 10158 | A | Force [NI] Dev1/56 = 0.0 | OK | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | | |
|-------|---|---|--|----|---|-------------------------|----|
| 10159 | R | Check that ALL doors closes in 3 sec (+1/-0) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10160 | R | Check that the RED leds on both sides of the door blink while the door closes [Safety Request: Prasa8-05] | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10161 | I | Safety Doors Loop Train Lines Dev5/89 = END2 90XP35 pin 96 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10162 | R | Read Defined Variable [NI] Dev5/89 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10163 | I | Speed Detection | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10164 | I | Door Auth Train Lines Dev1/64 = END1 90XR25 pin 84 (Right) Dev1/56 = END1 90XR25 pin 85 (Left) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10165 | A | Force [NI] Dev1/64 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10166 | A | Force [NI] Dev1/56 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10167 | R | All doors open | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10168 | I | V>5km/h Train Lines Dev1/34 = END1 90XR25 pin 28 Dev5/38 = END2 90XP35 pin 28 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10169 | A | Force [NI] Dev1/34 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10170 | R | Read Defined Variable [NI] Dev5/38 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10171 | R | All doors close due to the invalid state of the DCU | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10172 | A | Release [TT] (MPU1)lo_dor_m1opendoorleft | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10173 | A | Release [TT] (MPU1)lo_dor_m1opendoorright | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10174 | I | V>5km/h Train Lines Dev1/34 = END1 90XR25 pin 28 Dev5/38 = END2 90XP35 pin 28 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10175 | A | Force [NI] Dev1/34 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10176 | R | Read Defined Variable [NI] Dev5/38 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10177 | I | V<3km/h Train Lines Dev1/35 = END1 90XR25 pin 29 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10178 | A | Force [NI] Dev1/35 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | | |
|-------|---|--|--|----|--|----------------------------|----|
| 10179 | I | Door Auth Train Lines Dev1/64 = END1 90XR25 pin 84 (Right) Dev1/56 = END1 90XR25 pin 85 (Left) | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10180 | A | Force [NI] Dev1/64 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10181 | A | Force [NI] Dev1/56 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10182 | I | Safety Doors Loop Train Lines Dev1/59 = END1 90XR25 pin 96 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10183 | A | Force [NI] Dev1/59 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0


Emission date
23/10/2024



Section 13 – HVAC Air Conditioning


13.1 Instructions list

13.1.1 057_HVA-HVAC_TK

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|---|---------------|--------------|--------------------------|---------|
| 10001 | I | Air Conditioning (SPP=057) | | OK | | Mlungisi Madela - 529927 | M1 |
| 10002 | I | Initial conditions | | OK | | Mlungisi Madela - 529927 | M1 |
| 10003 | A | Car Should be Prepared | | OK | | Mlungisi Madela - 529927 | M1 |
| 10004 | I | Power Supply | | OK | | Mlungisi Madela - 529927 | M1 |
| 10005 | A | Close Circuit Breaker 57Q1 | | OK | | Mlungisi Madela - 529927 | M1 |
| 10006 | A | Close Circuit Breaker 57Q2 | | OK | | Mlungisi Madela - 529927 | M1 |
| 10007 | I | HVAC Electronic Power Supply | | OK | | Mlungisi Madela - 529927 | M1 |
| 10008 | A | Close Circuit Breaker F1 on the HVAC Panel | | OK | | Mlungisi Madela - 529927 | M1 |
| 10009 | I | The HVAC electronic is ON | | OK | | Mlungisi Madela - 529927 | M1 |
| 10010 | A | Turn the control switch to AUTO position on the HVAC Panel | | OK | | Mlungisi Madela - 529927 | M1 |
| 10011 | I | Software Upload | | OK | | Mlungisi Madela - 529927 | M1 |
| 10012 | I | Follow the procedure in the document below to upload software onto the HVAC electronic | | OK | | Mlungisi Madela - 529927 | M1 |
| 10013 | A | |  | OK | | Mlungisi Madela - 529927 | M1 |
| 10014 | I | Checking 400Vac | | OK | | Mlungisi Madela - 529927 | M1 |
| 10015 | A | Ensure that the 400Vac Shore Supply is connected to the vehicle, else connect it | | OK | | Mlungisi Madela - 529927 | M1 |
| 10016 | A | Disconnect connector 57XP4_X5 and use a multimeter to measure 400Vac between phases a1, a2 and b1 | | OK | | Mlungisi Madela - 529927 | M1 |
| 10017 | R | 400Vac (+-5%) measured | | OK | | Mlungisi Madela - 529927 | M1 |
| 10018 | A | On the same connector, with a phasemeter, check the correct Phase Rotation between points L1- Phase a1, L2- Phase a2 and L3- Phase b1. | | OK | | Mlungisi Madela - 529927 | M1 |



| | | | | | | | |
|-------|---|---|---|----|---|---------------------------|----|
| 10019 | R | The phase rotation is correct between all three phases | | OK | | Mlungisi Madela - 529927 | M1 |
| 10020 | A | Normalize connector 57XP4_X5 | | OK | | Mlungisi Madela - 529927 | M1 |
| 10021 | I | HVAC 50% restriction | | OK | | Mlungisi Madela - 529927 | M1 |
| 10022 | A | Force [TT] NRG_HvacM150Cmd = 0 | | OK | | Mlungisi Madela - 529927 | M1 |
| 10023 | I | HVAC inhib | | OK | | Mlungisi Madela - 529927 | M1 |
| 10024 | A | Force [TT] (MPU1)lo_hva_m1hvacinhibr1__1 = 1 | | OK | | Mlungisi Madela - 529927 | M1 |
| 10025 | A | Force [TT] (MPU1)lo_hva_m1hvacinhibr2__1 = 1 | | OK | | Mlungisi Madela - 529927 | M1 |
| 10026 | R | HVAC unit turns ON and starts to work | | OK | | Mlungisi Madela - 529927 | M1 |
| 10027 | I | Emergency Ventilation | | OK | | Mlungisi Madela - 529927 | M1 |
| 10028 | A | Force [TT] (MPU1)lo_hva_m1emergventil__1 = 1 | | OK | | Mlungisi Madela - 529927 | M1 |
| 10029 | I | All saloon HVAC units work in Ventilation mode. Not heating/cooling | | OK | | Mlungisi Madela - 529927 | M1 |
| 10030 | A | Connect the laptop to the HVAC maintenance software using HCU Finder and check the actual working mode of HVAC |  | OK | | Mlungisi Madela - 529927 | M1 |
| 10031 | R | Release [TT] (MPU1)lo_hva_m1emergventil__1 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10032 | I | Forced Mode (Saloon HVAC) | | OK | | Mlungisi Madela - 529927 | M1 |
| 10033 | I | In the maintenance software, select the 'Forced' tab, and use the "Required working mode" drop down box to force the following modes: | | OK | | Mlungisi Madela - 529927 | M1 |
| 10034 | I | For the next sections, walk through the whole car and physically check (feel) that the HVAC is functioning as desired | | OK | | Mlungisi Madela - 529927 | M1 |
| 10035 | A | Force Ventilation mode on the Saloon HVAC | | OK | | Mlungisi Madela - 529927 | M1 |
| 10036 | I | Ventilation Mode |  | OK | | Mlungisi Madela - 529927 | M1 |
| 10037 | R | All saloon HVAC units work in Ventilation mode. Not heating/cooling | | OK | | Mlungisi Madela - 529927 | M1 |

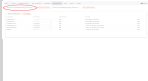

| | | | | | | | |
|-------|---|---|---|----|--|--------------------------|----|
| 10038 | I | Cooling Mode | | OK | | Mlungisi Madela - 529927 | M1 |
| 10039 | A | Force Cooling mode on the Saloon HVAC | | OK | | Mlungisi Madela - 529927 | M1 |
| 10040 | R | All saloon HVAC units work in Cooling mode | | OK | | Mlungisi Madela - 529927 | M1 |
| 10041 | I | Heating Mode | | OK | | Mlungisi Madela - 529927 | M1 |
| 10042 | A | Force Heating mode on the Saloon HVAC | | OK | | Mlungisi Madela - 529927 | M1 |
| 10043 | R | All saloon HVAC units work in Heating mode | | OK | | Mlungisi Madela - 529927 | M1 |
| 10044 | I | Self-Test | | OK | | Mlungisi Madela - 529927 | M1 |
| 10045 | A | Force Self-Test on the Saloon HVAC | | OK | | Mlungisi Madela - 529927 | M1 |
| 10046 | R | All saloon HVAC units work according to the mode described in the "Actual working mode" | | OK | | Mlungisi Madela - 529927 | M1 |
| 10047 | R | The Exhaust fans are Turned OFF | | OK | | Mlungisi Madela - 529927 | M1 |
| 10048 | I | HVAC Faults | | OK | | Mlungisi Madela - 529927 | M1 |
| 10049 | A | In the maintenance software, select the "Alarms / Warnings" tab |  | OK | | Mlungisi Madela - 529927 | M1 |
| 10050 | A | Ensure there are no active faults on the HVAC | | OK | | Mlungisi Madela - 529927 | M1 |
| 10051 | R | No active faults identified on the HVAC unit | | OK | | Mlungisi Madela - 529927 | M1 |
| 10052 | A | Release [TT] (MPU1)lo_hva_m1hvacinhibr1__1 | | OK | | Mlungisi Madela - 529927 | M1 |
| 10053 | A | Release [TT] (MPU1)lo_hva_m1hvacinhibr2__1 | | OK | | Mlungisi Madela - 529927 | M1 |
| 10054 | A | Release [TT] NRG_HvacM150Cmd | | OK | | Mlungisi Madela - 529927 | M1 |
| 10055 | I | End of Test | | OK | | Mlungisi Madela - 529927 | M1 |

13.1.2 057_HVA_SME-HVAC_SME

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|----------|---------|
| 10001 | I | HVA_057 Air Conditioning | | NE | | | M1 |
| 10002 | I | Initial conditions | | NE | | | M1 |
| 10003 | A | Car Should be Prepared with CVS running and 400V ac available in the car | | NE | | | M1 |
| 10004 | I | HVAC AC Power Supply | | NE | | | M1 |
| 10005 | A | Close Circuit Breaker 13Q1 and 13Q5 | | NE | | | M1 |
| 10006 | A | Check on the DDU if the HVAC is offline | | NE | | | M1 |
| 10007 | I | Checking 400Vac | | NE | | | M1 |
| 10008 | A | Close Circuit Breaker 57Q1 | | NE | | | M1 |
| 10009 | A | Disconnect connector 57XP4_X5 and use a multimeter to check 400Vac between each phases a1, a2 and b1 | | NE | | | M1 |
| 10010 | R | 400Vac measured between all phases | | NE | | | M1 |
| 10011 | A | On the same connector 57XP4_X5, with a phasemeter, check the phase rotation of all 3 phases which are a1- phase L1, a2- Phase L2 and b1- phase L3 | | NE | | | M1 |
| 10012 | R | The phase rotation is correct between all three phases | | NE | | | M1 |
| 10013 | A | Normalize connector 57XP4_X5. | | NE | | | M1 |
| 10014 | I | HVAC controller power supply | | NE | | | M1 |
| 10015 | A | Close Circuit Breaker 57Q2 | | NE | | | M1 |
| 10016 | A | Allow the HVAC to initialize and check on the DDU if the HVAC is online | | NE | | | M1 |
| 10017 | R | HVAC unit turns ON and starts to work | | NE | | | M1 |
| 10018 | I | HVAC inhib | | NE | | | M1 |

| | | | | | | |
|-------|---|--|---|----|--|----|
| 10019 | A | Force [TT] (MPU1)lo_hva_m1hvacinhibr1__1 = 1 | | NE | | M1 |
| 10020 | A | Force [TT] (MPU1)lo_hva_m1hvacinhibr2__1 = 1 | | NE | | M1 |
| 10021 | I | 50% HVAC restriction | | NE | | M1 |
| 10022 | A | Force [TT] NRG_HvacM150Cmd = 0 | | NE | | M1 |
| 10023 | I | saloon HVAC | | NE | | M1 |
| 10024 | I | HVAC web portal | | NE | | M1 |
| 10025 | I | The attached document is a procedure on how to navigate around the maintenance software |  | NE | | M1 |
| 10026 | I | Connect the laptop to the HVAC maintenance software using web browser. Enter the following IP address on the web browser 10.136.xxx30 xxx represents the train number Login: maint Password: maint | | NE | | M1 |
| 10027 | I | Full "Self test" saloon | | NE | | M1 |
| 10028 | R | On status tab, Active mode is off for both cab and saloon |  | NE | | M1 |
| 10029 | A | Go to Alarms tab and clear all the alarms for saloon and cabin | | NE | | M1 |
| 10030 | I | For the following tests make sure on the webHMI tab you change controller to be controlled by webHMI and not MPU |  | NE | | M1 |
| 10031 | A | Before running the full test, please click on reset test to reset the previous results. | | NE | | M1 |
| 10032 | A | Select Full-Test on the Saloon HVAC |  | NE | | M1 |
| 10033 | R | All saloon HVAC units work according to the mode described in the "ACTIVE MODE" on the status tab | | NE | | M1 |
| 10034 | R | When the test is complete, please check if the status is showing as "TEST PASS" and the test took 3 mins +/- 2 seconds for each mode. | | NE | | M1 |
| 10035 | I | Forced Mode (Saloon HVAC) | | NE | | M1 |

| | | | | | | |
|-------|---|---|---|----|--|----|
| 10036 | I | During all tests Walk through the whole car and physically check (feel) that the HVAC is functioning as desired | | NE | | M1 |
| 10037 | I | Go to maintenance tab to force the following modes |  | NE | | M1 |
| 10038 | I | Cooling Mode | | NE | | M1 |
| 10039 | A | Select forced Cooling mode on the Saloon HVAC and let it run for 5 mins | | NE | | M1 |
| 10040 | R | All HVAC units are cooling | | NE | | M1 |
| 10041 | I | Heating Mode | | NE | | M1 |
| 10042 | A | Select forced Heating mode on the Saloon HVAC and let it run for 5 mins | | NE | | M1 |
| 10043 | R | All HVAC units are heating | | NE | | M1 |
| 10044 | I | HVAC Faults | | NE | | M1 |
| 10045 | A | In the maintenance software, select the "Alarms" tab | | NE | | M1 |
| 10046 | A | Ensure there are no active faults on the HVAC for Cabin and Saloon. Use the highlighted drop down to navigate between saloon and cabin. |  | NE | | M1 |
| 10047 | R | No active faults identified on the HVAC unit | | NE | | M1 |
| 10048 | A | Release [TT] (MPU1)lo_hva_m1hvacinhibr1__1 | | NE | | M1 |
| 10049 | A | Release [TT] (MPU1)lo_hva_m1hvacinhibr2__1 | | NE | | M1 |
| 10050 | A | Release [TT] NRG_HvacM150Cmd | | NE | | M1 |
| 10051 | R | Cabin HVAC turned OFF | | NE | | M1 |
| 10052 | I | End of test | | NE | | M1 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 14 – Fire protection

14.1 Instructions list

14.1.1 067_FSD-Fire Protection

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|---------------------------|---------|
| 10001 | I | Fire Protection System (SPP=067) | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10002 | I | Fire Detection Train Lines | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10003 | I | Fire Detection Train Lines Dev1/76 = END1 90XR24 pin 21 Dev5/76 = END2 90XP34 pin 21 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10004 | A | Force [NI] Dev1/76 = 1.0 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10005 | R | Read Defined Variable [NI] Dev5/76 = 1.0 | | OK | 1 | Mphato Mphahlele - 480716 | M1 |
| 10006 | A | Force [NI] Dev1/76 = 0.0 | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10007 | R | Read Defined Variable [NI] Dev5/76 = 0.0 | | OK | 0 | Mphato Mphahlele - 480716 | M1 |
| 10008 | I | Continuity Test | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10009 | I | The following steps are continuity tests between the two points described in each step. Use a multimeter for this test. | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10010 | A | From : [(local: +END1 -90XR23.B (pin 4))] to: [-Inter-connector (local: +END2 -90XP33.a pin 7)] | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10011 | A | From : [(local: +END1 -90XR23.B (pin 5))] to: [-Inter-connector (local: +END2 -90XP33.a pin 8)] | | OK | | Mphato Mphahlele - 480716 | M1 |
| 10012 | A | From : [(local: +END1 -90XR23.A (pin 7))] to: [-Inter-connector (local: +END2 -90XP33.b pin 4)] | | OK | | Mphato Mphahlele - 480716 | M1 |



| | | |
|---|--|-----------------------------|
| Serial Tests Report TS252 – M1 – VFT RTR Vehicle Functional Static Testing Report | Document Reference GIB0000007327 Version: A0 | Emission date 23/10/2024 |
|---|--|-----------------------------|

| | | | | | | | |
|-------|---|---|--|----|--|------------------------------|----|
| 10013 | A | From : [(local: +END1 -90XR23.A (pin 8))] to : [-Inter-connector (local: +END2 -90XP33.b pin 5)] | | OK | | Mphato Mphahlele - 480716 | M1 |
|-------|---|---|--|----|--|------------------------------|----|



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 15 – Traction and Electric Brake

15.1 Instructions list

15.1.1 033_TRC-Traction and Electric Brake

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|---------------------------|---------|
| 10001 | I | Traction and Electric Brake (SPP=033) | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10002 | I | Circuit Breakers and Configuration | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10003 | A | Close Circuit Breaker 33Q1 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10004 | A | Close Circuit Breaker 33Q2 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10005 | A | Close Circuit Breaker 33Q3 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10006 | A | Close Circuit Breaker 33Q4 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10007 | A | Close Circuit Breaker 33Q5 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10008 | R | Read Defined Variable [TT] (TBCU1)LI_CAR_ID1 = 1.0 | | OK | 1 | Tshembhani Khosa - 446920 | M1 |
| 10009 | I | Train Lines | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10010 | I | 110Vdc Normal Traction EL Train Lines Dev 1/66 = END1 90XP25 pin 49 Dev 2/65 = END1 90XP35 pin 42 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10011 | A | Force [NI] Dev1/66 = 1.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10012 | R | Read Defined Variable [NI] Dev2/65 = 1.0 | | OK | 1 | Tshembhani Khosa - 446920 | M1 |
| 10013 | A | Force [NI] Dev1/66 = 0.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10014 | R | Read Defined Variable [NI] Dev2/65 = 0.0 | | OK | 0 | Tshembhani Khosa - 446920 | M1 |
| 10015 | I | Forward Train Lines: Dev1/31 : END1 90XR25 pin 25 Dev5/78 : END2 90XP35 pin 30 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10016 | A | Force [NI] Dev1/31 = 1.0 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10017 | R | Read Defined Variable [TT] (TBCU1)LI_FORWARD = 1.0 | | OK | 1 | Tshembhani Khosa - 446920 | M1 |
| 10018 | R | Read Defined Variable [NI] Dev5/78 = 1.0 | | OK | 1 | Tshembhani Khosa - 446920 | M1 |
| 10019 | I | Forward Train Lines: Dev1/31 : END1 90XR25 pin 25 Dev5/78 : END2 90XP35 pin 30 | | OK | | Tshembhani Khosa - 446920 | M1 |

| | | | | | | | |
|-------|---|---|--|----|---|-------------------------|----|
| 10020 | A | Force [NI] Dev1/31 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10021 | R | Read Defined Variable [TT] (TBCU1)LI_FORWARD = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10022 | R | Read Defined Variable [NI] Dev5/78 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10023 | I | Reverse Train Lines: Dev1/36 : END1 90XR25 pin 30 Dev5/35 : END2 90XP35 pin 25 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10024 | A | Force [NI] Dev1/36 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10025 | R | Read Defined Variable [TT] (TBCU1)LI_REVERSE = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10026 | R | Read Defined Variable [NI] Dev5/35 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10027 | I | Reverse Train Lines: Dev1/36 : END1 90XR25 pin 30 Dev5/35 : END2 90XP35 pin 25 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10028 | A | Force [NI] Dev1/36 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10029 | R | Read Defined Variable [TT] (TBCU1)LI_REVERSE = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10030 | R | Read Defined Variable [NI] Dev5/35 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10031 | I | Traction Train Lines: Dev1/37 : END1 90XR25 pin 31 Dev5/81 : END2 90XP35 pin 31 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10032 | A | Force [NI] Dev1/37 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10033 | R | Read Defined Variable [TT] (TBCU1)LI_TRACTION = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10034 | R | Read Defined Variable [NI] Dev5/81 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10035 | I | Traction Train Lines: Dev1/37 : END1 90XR25 pin 31 Dev5/81 : END2 90XP35 pin 31 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10036 | A | Force [NI] Dev1/37 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10037 | R | Read Defined Variable [TT] (TBCU1)LI_TRACTION = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10038 | R | Read Defined Variable [NI] Dev5/81 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10039 | I | No Brake Train Lines: Dev1/38 : END1 90XR25 pin 32 Dev5/82 : END2 90XP35 pin 32 | | OK | | Celiwe Sokhela - 491462 | M1 |

| | | | | | | | |
|-------|---|---|--|----|---|-------------------------|----|
| 10040 | A | Force [NI] Dev1/38 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10041 | R | Read Defined Variable [TT] (TBCU1)LI_NOBRAKE = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10042 | R | Read Defined Variable [NI] Dev5/82 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10043 | I | No Brake Train Lines: Dev1/38 : END1 90XR25 pin 32 Dev5/82 : END2 90XP35 pin 32 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10044 | A | Force [NI] Dev1/38 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10045 | R | Read Defined Variable [TT] (TBCU1)LI_NOBRAKE = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10046 | R | Read Defined Variable [NI] Dev5/82 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10047 | I | Traction Interlock Bypass Train Lines Dev1/4 : END1 90XR24 pin 6 Dev5/4 : END2 90XP34 pin 6 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10048 | A | Force [NI] Dev1/4 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10049 | R | Read Defined Variable [NI] Dev5/4 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10050 | A | Force [NI] Dev1/4 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10051 | R | Read Defined Variable [NI] Dev5/4 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10052 | I | Traction Interlock Train Lines Dev1/39 : END1 90XR25 pin 41 Dev5/83 : END2 90XP35 pin 41 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10053 | A | Force [NI] Dev1/39 = 1.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10054 | R | Read Defined Variable [TT] (TBCU1)LI_NOT_INHIB = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10055 | R | Read Defined Variable [NI] Dev5/83 = 1.0 | | OK | 1 | Celiwe Sokhela - 491462 | M1 |
| 10056 | I | Traction Interlock Train Lines Dev1/39 : END1 90XR25 pin 41 Dev5/83 : END2 90XP35 pin 41 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10057 | A | Force [NI] Dev1/39 = 0.0 | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10058 | R | Read Defined Variable [TT] (TBCU1)LI_NOT_INHIB = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10059 | R | Read Defined Variable [NI] Dev5/83 = 0.0 | | OK | 0 | Celiwe Sokhela - 491462 | M1 |
| 10060 | I | Coolant Liquid | | OK | | Celiwe Sokhela - 491462 | M1 |



| | | | | | | | |
|-------|---|--|--------------------------|----|--|-------------------------|----|
| 10061 | A | Check that the coolant level is atleast 1/2 of the sight glass level indicator | <input type="checkbox"/> | OK | | Celiwe Sokhela - 491462 | M1 |
| 10062 | R | Coolant Liquid Level is OK | | OK | | Celiwe Sokhela - 491462 | M1 |
| 10063 | I | End of Test | | OK | | Celiwe Sokhela - 491462 | M1 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0


Emission date
23/10/2024

Section 16 – Vehicle Normalization

16.1 Instructions list

16.1.1 NORM-Vehicle Normalization

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|---|---------------|--------------|-----------------------|---------|
| 10001 | I | Initial Conditions | | OK | | Amanda Ntuli - 526239 | M1 |
| 10002 | I | The VFT procedures are all completed | | OK | | Amanda Ntuli - 526239 | M1 |
| 10003 | I | Vehicle Normalization Check | | OK | | Amanda Ntuli - 526239 | M1 |
| 10004 | R | On LV3 all Circuit Breakers are installed and secured | | OK | | Amanda Ntuli - 526239 | M1 |
| 10005 | R | On LV3 all Dataplugs are installed, tightened and earth braids are fastened | | OK | | Amanda Ntuli - 526239 | M1 |
| 10006 | R | On LV3 all Connectors are tightened | | OK | | Amanda Ntuli - 526239 | M1 |
| 10007 | R | On LV3 there are no missing components, device, wiring or connectors. | | OK | | Amanda Ntuli - 526239 | M1 |
| 10008 | A | ON LV3, make sure that both bolts on 93XT300 terminal 4 are tightened and torque marked. |  | OK | | Amanda Ntuli - 526239 | M1 |
| 10009 | R | On LV6 all Dataplugs are installed, tightened and earth braids are fastened | | OK | | Amanda Ntuli - 526239 | M1 |
| 10010 | R | On LV6 all Connectors are tightened | | OK | | Amanda Ntuli - 526239 | M1 |
| 10011 | R | On LV6 there are no missing components, device, wiring or connectors. | | OK | | Amanda Ntuli - 526239 | M1 |
| 10012 | R | On HC Cubicle the Controller is installed and properly tightened and its connectors are tightened | | OK | | Amanda Ntuli - 526239 | M1 |
| 10013 | R | All DCUs are properly installed and secured | | OK | | Amanda Ntuli - 526239 | M1 |
| 10014 | R | All Internal Displays are properly installed and secured | | OK | | Amanda Ntuli - 526239 | M1 |
| 10015 | R | All Light Covers are properly installed | | OK | | Amanda Ntuli - 526239 | M1 |
| 10016 | R | All Saloon Fire Detectors are properly installed and secured | | OK | | Amanda Ntuli - 526239 | M1 |
| 10017 | R | All covers are normalised inside the car | | OK | | Amanda Ntuli - 526239 | M1 |

| | | | | | | | |
|-------|---|--|--|----|--|---------------------------|----|
| 10018 | R | On the Underframe, TBCU Agate is installed and properly tightened | | OK | | Amanda Ntuli - 526239 | M1 |
| 10019 | R | On the Underframe, Auxiliary Compressor cover is normalized | | OK | | Amanda Ntuli - 526239 | M1 |
| 10020 | R | On the Underframe, Panto panel cover is normalized | | OK | | Amanda Ntuli - 526239 | M1 |
| 10021 | R | On the Underframe, Speed Sensors are installed and properly tightened | | OK | | Amanda Ntuli - 526239 | M1 |
| 10022 | R | On the LVB, all Circuit Breakers are installed and properly tightened | | OK | | Amanda Ntuli - 526239 | M1 |
| 10023 | R | On the LVB, all Relays and Timers are installed and properly tightened | | OK | | Amanda Ntuli - 526239 | M1 |
| 10024 | R | On the LVB, BRIOMs are installed and properly tightened | | OK | | Amanda Ntuli - 526239 | M1 |
| 10025 | R | On the LVB there are no missing components, device, wiring or connectors. | | OK | | Amanda Ntuli - 526239 | M1 |
| 10026 | R | On the Underframe, all Connectors are tightened | | OK | | Amanda Ntuli - 526239 | M1 |
| 10027 | R | All underframe covers are normalised | | OK | | Amanda Ntuli - 526239 | M1 |
| 10028 | R | On END1 the Octopus cables are disconnected from the car and properly stored. | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10029 | R | On END2 the Octopus cables are disconnected from the car and properly stored. | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10030 | R | On the roof, there is no Strap connected to the Pantograph | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10031 | R | The Test Bench is switched OFF and the Octopus cables are disconnected and properly stored | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10032 | R | ALL P.Os of this car are closed | | OK | | Tshembhani Khosa - 446920 | M1 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 17 – PACIS Network

17.1 Instructions list

17.1.1 054_PIS-PACIS Network

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|-------------------------|---------|
| 10001 | I | PACIS System (SPP=054) | | OK | | Gcobani Baliso - 480570 | M1 |
| 10002 | I | Initial conditions | | OK | | Gcobani Baliso - 480570 | M1 |
| 10003 | I | 110Vdc Normal line is connected and ON | | OK | | Gcobani Baliso - 480570 | M1 |
| 10004 | I | Circuit Breakers | | OK | | Gcobani Baliso - 480570 | M1 |
| 10005 | A | Close Circuit Breaker 54Q1 | | OK | | Gcobani Baliso - 480570 | M1 |
| 10006 | A | Close Circuit Breaker 54Q2 | | OK | | Gcobani Baliso - 480570 | M1 |
| 10007 | A | Close Circuit Breaker 54Q10 | | OK | | Gcobani Baliso - 480570 | M1 |
| 10008 | A | Close Circuit Breaker 54Q11 | | OK | | Gcobani Baliso - 480570 | M1 |
| 10009 | A | Close Circuit Breaker 55Q2 | | OK | | Gcobani Baliso - 480570 | M1 |
| 10010 | A | Close Circuit Breaker 55Q3 | | OK | | Gcobani Baliso - 480570 | M1 |
| 10011 | R | All 'Pacis System' circuit breakers are closed | | OK | | Gcobani Baliso - 480570 | M1 |
| 10012 | I | Power Supply of Router Switches | | OK | | Gcobani Baliso - 480570 | M1 |
| 10013 | I | Ethernet Switch CRS1 | | OK | | Gcobani Baliso - 480570 | M1 |
| 10014 | R | CRS1 is ON | | OK | | Gcobani Baliso - 480570 | M1 |
| 10015 | I | Ethernet Switch CRS2 | | OK | | Gcobani Baliso - 480570 | M1 |
| 10016 | R | CRS2 is ON | | OK | | Gcobani Baliso - 480570 | M1 |
| 10017 | I | DPAI-1 | | OK | | Gcobani Baliso - 480570 | M1 |
| 10018 | R | DPAI-1 is ON | | OK | | Gcobani Baliso - 480570 | M1 |
| 10019 | I | DPAI-2 | | OK | | Gcobani Baliso - 480570 | M1 |
| 10020 | R | DPAI-2 is ON | | OK | | Gcobani Baliso - 480570 | M1 |
| 10021 | I | Lateral Display 'LAT1' | | OK | | Gcobani Baliso - 480570 | M1 |

| | | | | | | | |
|-------|---|--|--|----|------|---------------------------|----|
| 10022 | R | The PWR (power) LED is ON on the Lateral Display 'LAT1' | | OK | | Gcobani Baliso - 480570 | M1 |
| 10023 | I | Lateral Display 'LAT2' | | OK | | Gcobani Baliso - 480570 | M1 |
| 10024 | R | The PWR (power) LED is ON on the Lateral Display 'LAT2' | | OK | | Gcobani Baliso - 480570 | M1 |
| 10025 | I | Interior Display 'INT1' | | OK | | Gcobani Baliso - 480570 | M1 |
| 10026 | R | The PWR (power) LED is ON on the Interior Display 'INT1' | | OK | | Gcobani Baliso - 480570 | M1 |
| 10027 | I | Interior Display 'INT2' | | OK | | Gcobani Baliso - 480570 | M1 |
| 10028 | R | The PWR (power) LED is ON on the Interior Display 'INT2' | | OK | | Gcobani Baliso - 480570 | M1 |
| 10029 | I | Impedance of Loudspeaker | | OK | | Gcobani Baliso - 480570 | M1 |
| 10030 | I | Saloon Speakers Commanded by DPAI-1 | | OK | | Gcobani Baliso - 480570 | M1 |
| 10031 | A | Measure the impedance connector '54XP1_X4' between pins:z32(+) and z30 (-) | | OK | | Gcobani Baliso - 480570 | M1 |
| 10032 | R | Impedance Result Max : $x \leq 32$ (Ohm) | | OK | 30.9 | Gcobani Baliso - 480570 | M1 |
| 10033 | I | Saloon Speakers Commanded by DPAI-2 | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10034 | A | Measure the impedance connector '54XP2_X4' between pins:z32(+) and z30 (-) | | OK | | Tshembhani Khosa - 446920 | M1 |
| 10035 | R | Impedance Result Max : $x \leq 32$ (Ohm) | | OK | 30.2 | Tshembhani Khosa - 446920 | M1 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

Section 18 – Report summaries

18.1 Results status

| Test Instruction Sheet | Compliant | Incomplete | Non-compliant |
|---|-----------|------------|---------------|
| Vehicle Normalization | X | | |
| Train-Ground Communication | X | | |
| Traction and Electric Brake | X | | |
| TCMS Network | X | | |
| Service Brake | X | | |
| Rescue Mode and Emergency Disconnection | X | | |
| Passenger Doors | X | | |
| Pantograph | X | | |
| PACIS Network | X | | |
| Internal Lighting | X | | |
| HVAC Air Conditioning | X | | |
| Holding and Parking Brake | X | | |
| Fire protection | X | | |
| Energy Distribution | X | | |
| Emergency Brake | X | | |
| Cabin Control | X | | |

18.2 Tools used

| Function | Tool name | Tool number | Next Calibration date |
|----------|-------------|--------------|-----------------------|
| 015_NRG | NPhasemètre | Phasemeter | 10/31/2024 |
| 021_PNT | Manometro | Manometer | 10/29/2024 |
| 040_SBK | Manometro | Manometer | 10/29/2024 |
| 045_PBK | Manometro | Manometer | 10/29/2024 |
| 057_HVA | NPhasemètre | Phasemeter | 10/31/2024 |
| 062_ETS | Multimetro | Multimeter 3 | 10/31/2024 |



Serial Tests Report
TS252 – M1 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007327
Version: A0

Emission date
23/10/2024

| | | | |
|---------|------------|----------------|------------|
| 064_COM | N | Radio Analyser | 11/30/2024 |
| 067_FSD | Multimetro | Multimeter 2 | 10/31/2024 |

| Vehicle | Equipment | Expected version | Version loaded |
|---------|-----------|------------------|----------------|
| M1 | | | |